



NEW WARE NEWSLETTER

NEW MASKS MAY 2024

NWAM1217 1/48 B-26B Marauder BASIC kabuki masks	ICM
NWAM1218 1/48 B-26B Marauder EXPERT kabuki masks	ICM
NWAM1219 1/72 C-47 Skytrain, Dakota M k.III(Mk.IV) BAS IC kabuki masks	Airfix, Heller
NWAM1220 1/72 C-47 Skytrain, Dakota M k.III(Mk.IV) EXPERT kabuki masks	Airfix, Heller
NWAM1221 1/48 AH-1Z Viper BASIC kabuki masks	Zimi, Kitty Hawk
NWAM1222 1/48 AH-1Z Viper EXPERT kabuki masks	Zimi, Kitty Hawk



**B-26B Marauder BASIC kabuki masks
for ICM 48320 kit**

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point



Placing wet masks on wet surface is recommended, except those marked by **W**.

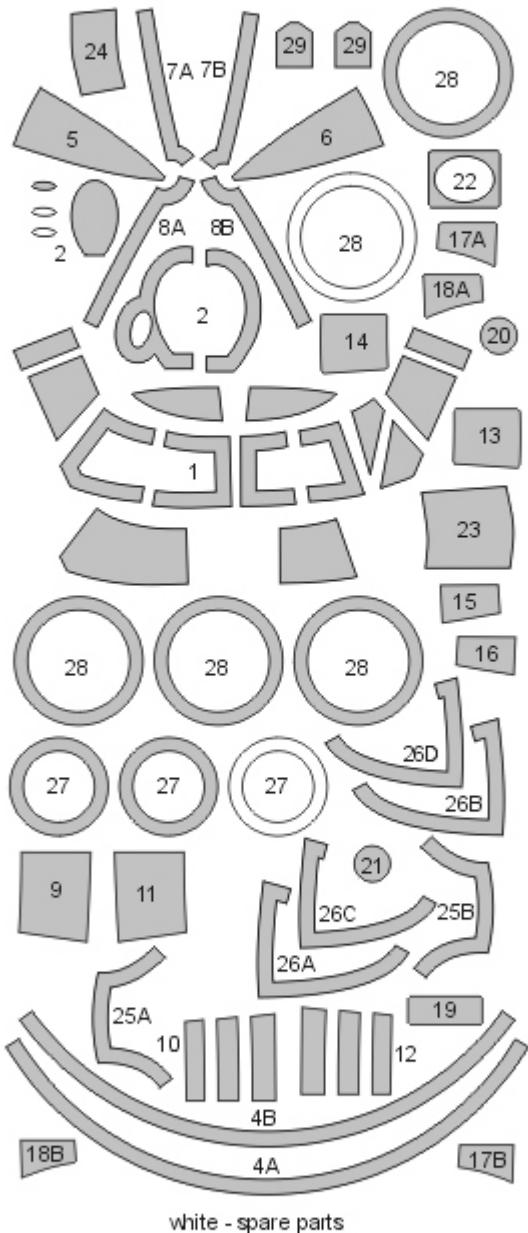

k F54+D20+F56



k D34+D21+D33

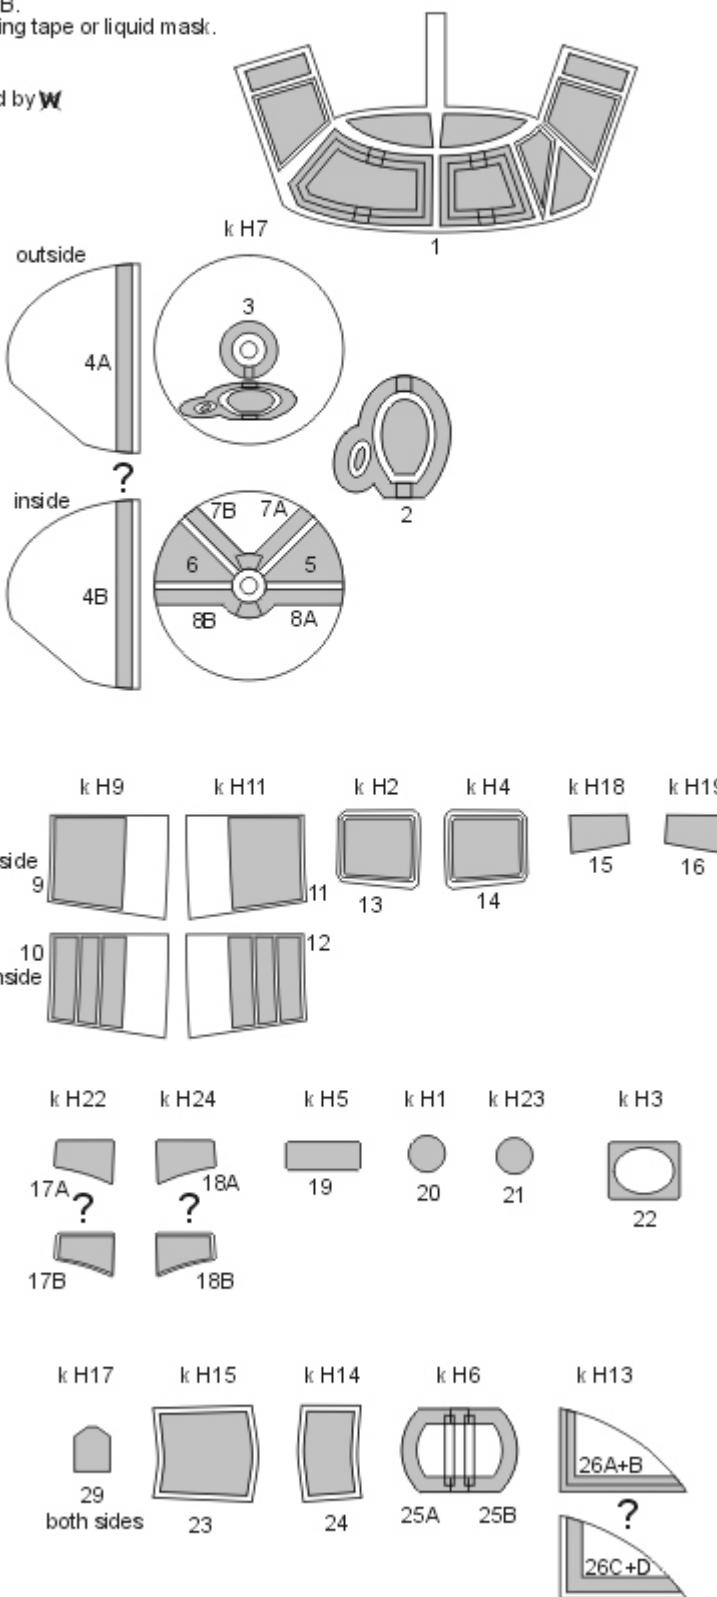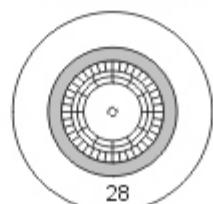

NWAM1218



B-26B Marauder EXPERT kabuki masks
for ICM 48320 kit
<http://mek.kosmo.cz/newware>

Includes also windows
inner side masks, camouflage detail
and bombs yellow stripes masks

1/48 scale

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.



Where the mask is divided into A and B parts, first apply part A, next part B.









The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**.

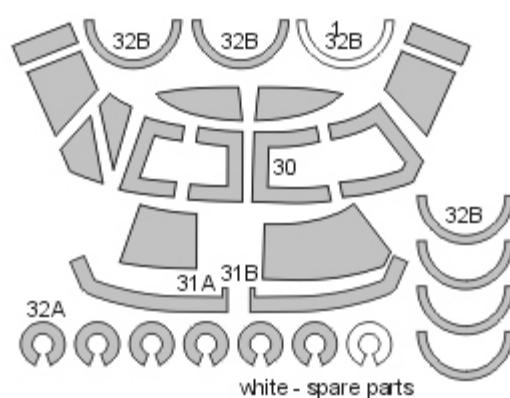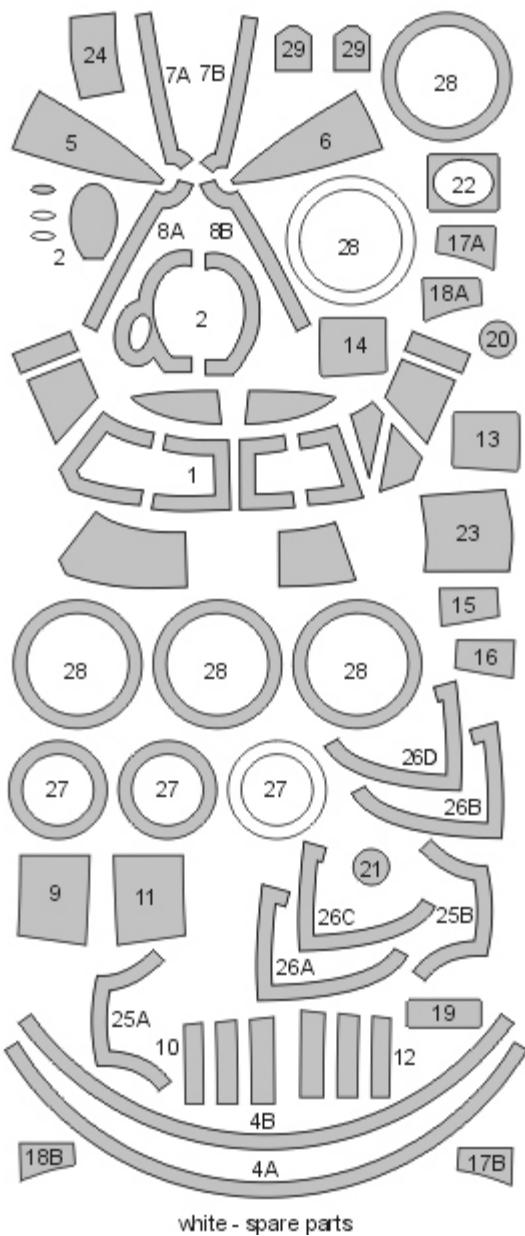

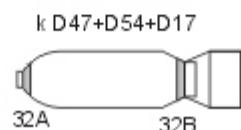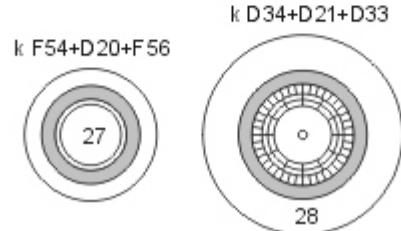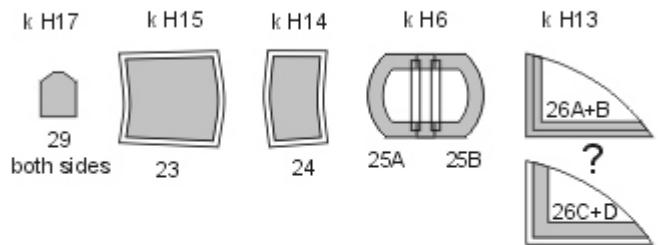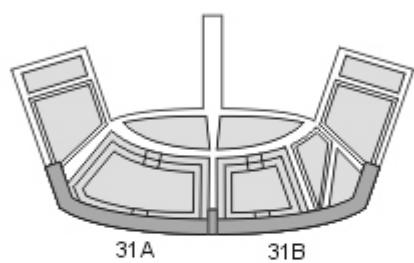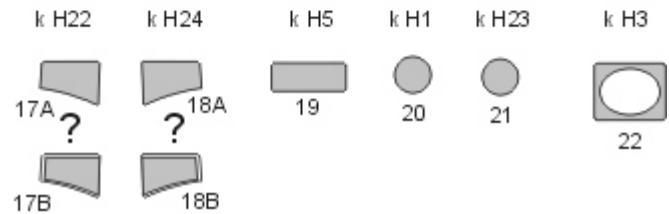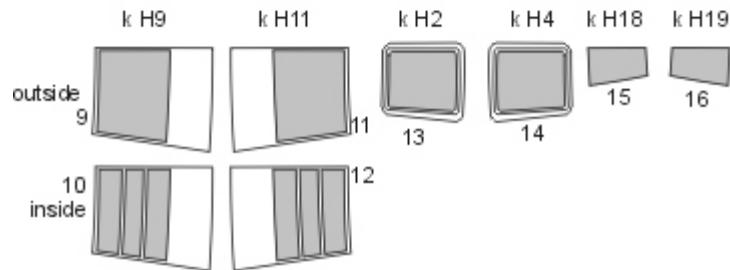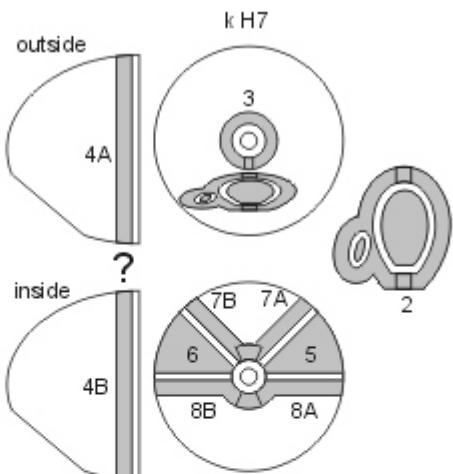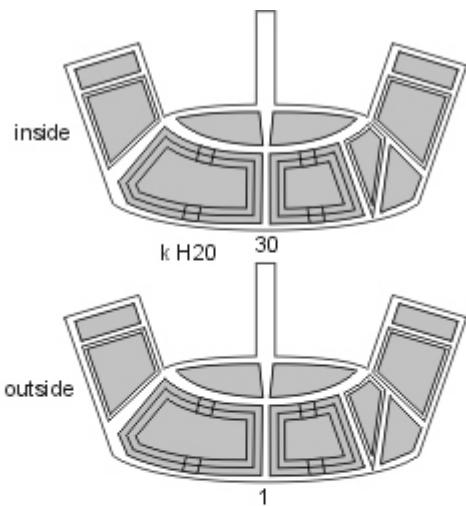



C-47 Skytrain, Dakota Mk.III(Mk.IV) BASIC kabuki masks

for Airfix A08014, A08015(A), A09008

and Heller C-47 Dakota kits

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:


Let the sprayed color dry before applying masks. Remove masks very carefully after painting.

Where the mask is divided into A and B parts, first apply part A, next part B.


The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point

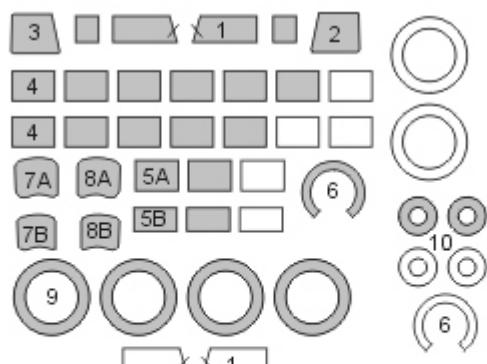Placing wet masks on wet surface is recommended, except those marked by **W**.

white - spare parts

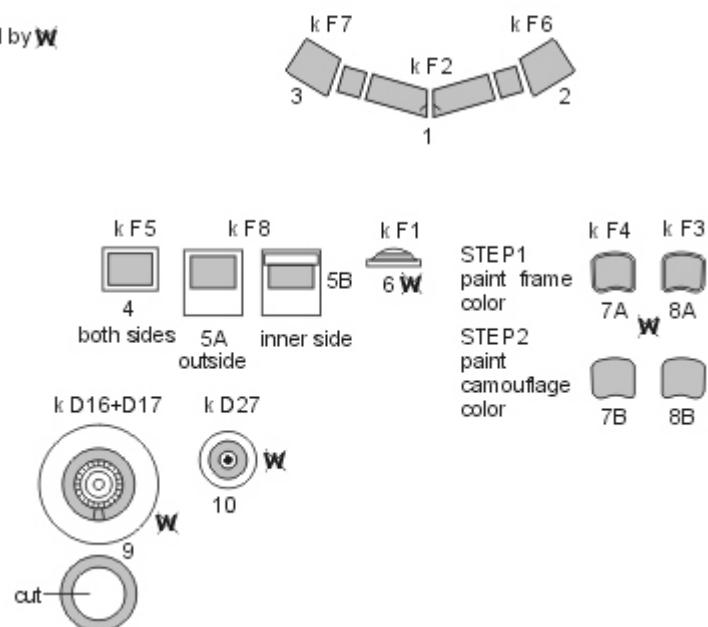

NWAM1220



C-47 Skytrain, Dakota Mk.III(Mk.IV) BASIC kabuki masks

for Airfix A08014, A08015[A], A09008

and Heller C-47 Dakota kits

<http://mek.kosmo.cz/newware>

1/72 scale

asks
Includes also windows
inner side masks and camouflage
detail masks

tom.nwkits@seznam.cz

Important:

Important: Let the sprayed color dry before applying masks. Remove masks very carefully after painting.








Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**.

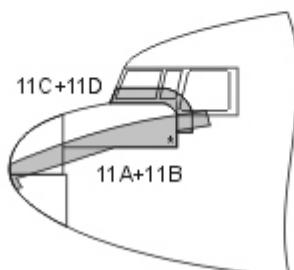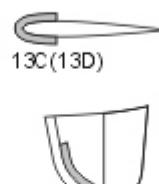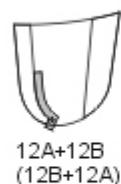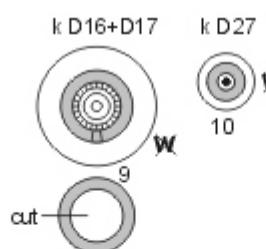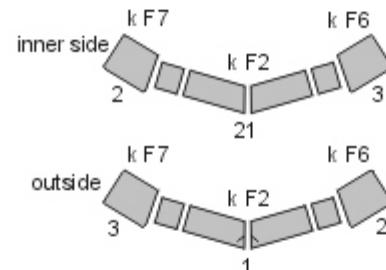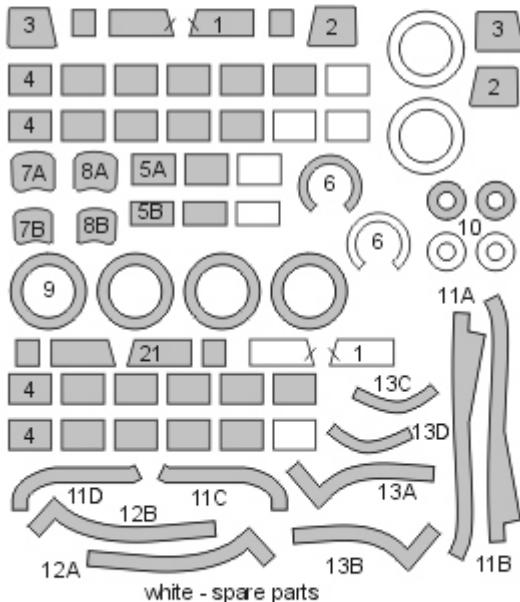



AH-1Z Viper BASIC kabuki masks
for Zimi ZM80125 and Kitty Hawk KH80125 kits
<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.



Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**.

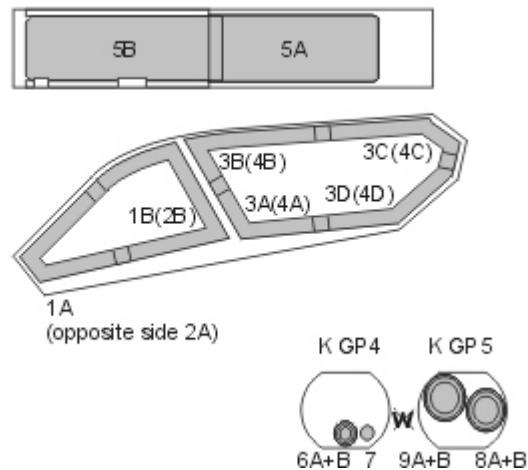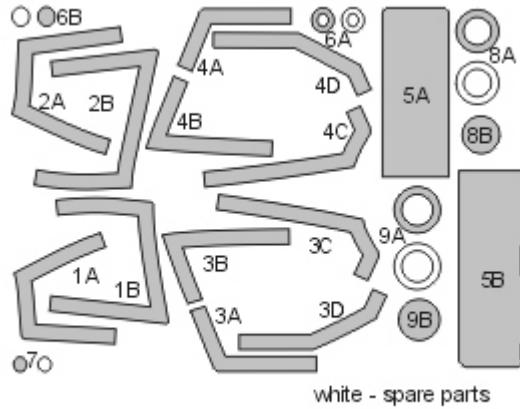



AH-1Z Viper EXPERT kabuki masks
for Zimi ZM80125 and Kitty Hawk KH80125 kits
<http://mek.kosmo.cz/newware>

Includes also windows
inner side masks

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.


K kit part

* start placing the mask from this point



Placing wet masks on wet surface is recommended, except those marked by **W**.

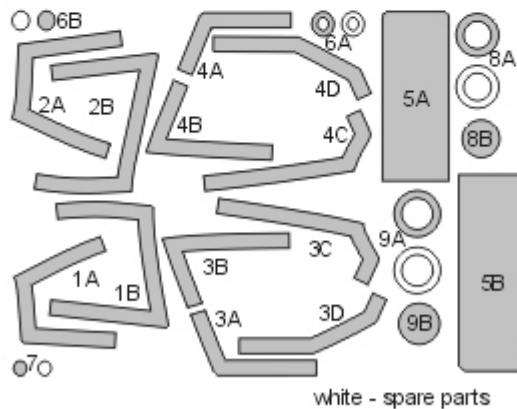

white - spare parts

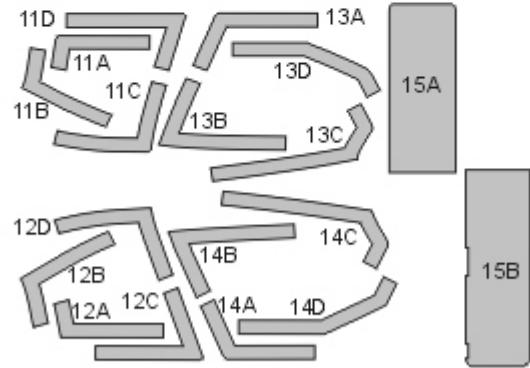

STEP 1 (exterior view)
mask interior, paint interior color

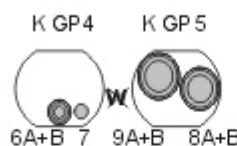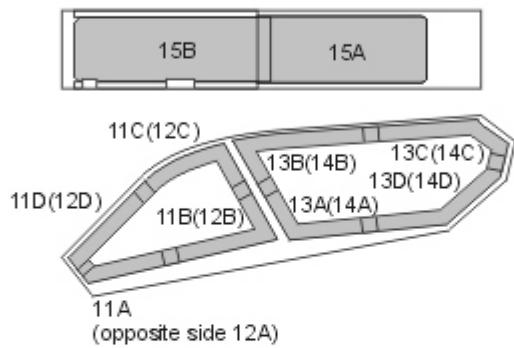

STEP 2
mask exterior, paint camouflage color

