



NEW WARE NEWSLETTER

NEW MASKS JUNE 2024

NWAM1223 1/48 PZL W-3 (A, RL, T, WARM) Sokol BASIC kabuki masks	Answer
NWAM1224 1/48 PZL W-3 (A, RL, T, WARM) Sokol ADVANCED kabuki masks	Answer
NWAM1225 1/48 PZL W-3 (A, RL, T, WARM) Sokol EXPERT kabuki masks	Answer
NWAM1226 1/48 A-10 C Thunderbolt II BASIC kabuki masks	GW.H
NWAM1227 1/48 A-10 C Thunderbolt II EXPERT kabuki masks	GW.H
NWAM1228 1/72 B-24H Liberator kabuki masks	Airfix
NWAM1229 1/48 B-24J Liberator BASIC kabuki masks	HobbyBoss
NWAM1230 1/48 B-24J Liberator EXPERT kabuki masks	HobbyBoss
NWAM1231 1/48 Mirage IV A/P BASIC kabuki masks	Heller
NWAM1232 1/48 Mirage IV A/P ADVANCED kabuki masks	Heller
NWAM1233 1/48 Mirage IV A/P EXPERT kabuki masks	Heller
NWAM1234 1/48 Ka-52 Alligator BASIC kabuki masks	Zvezda
NWAM1235 1/48 Ka-52 Alligator EXPERT kabuki masks	Zvezda



PZL W-3 (A, RL, T, WARM) Sokol BASIC kabuki masks

for Answer AA48001-07, 12 kits

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:


Let the sprayed color dry before applying masks. Remove masks very carefully after painting.

Where the mask is divided into A and B parts, first apply part A, next part B.


The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point

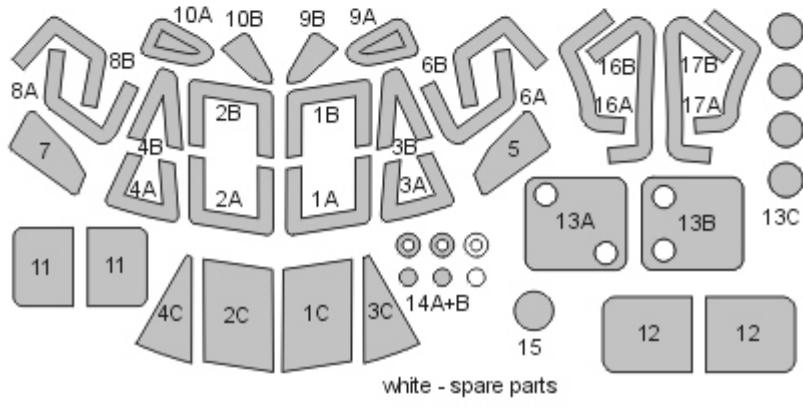Placing wet masks on wet surface is recommended, except those marked by **W**.

K A-6, A-10 K A-5

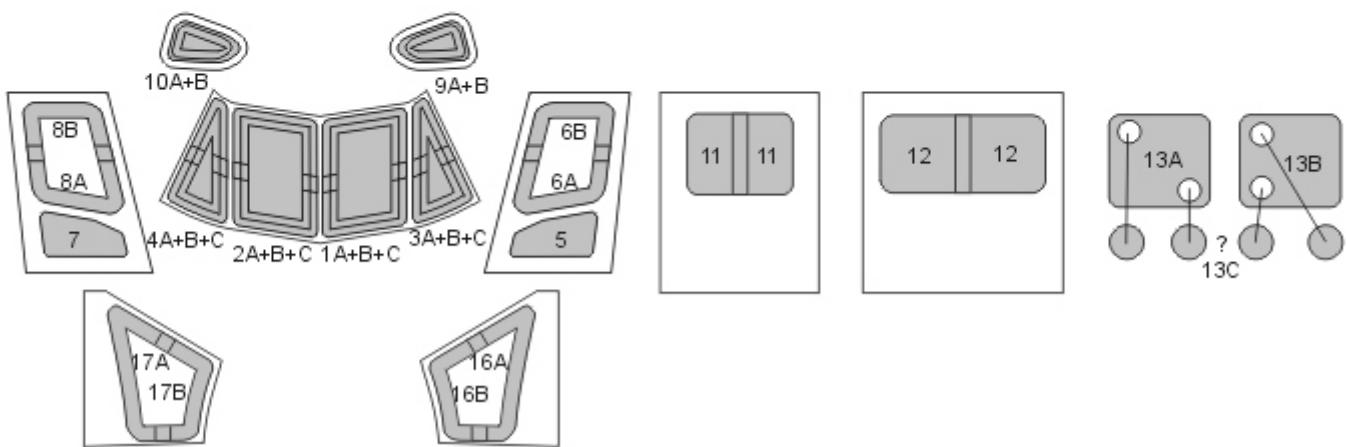



PZL W-3 (A, RL, T, WARM) Sokol ADVANCED kabuki masks

for Answer AA48001-07, 12 kits

<http://mek.kosmo.cz/newware>Includes also windows
seal masks

tom.nwkits@seznam.cz

Important:


Let the sprayed color dry before applying masks. Remove masks very carefully after painting.

Where the mask is divided into A and B parts, first apply part A, next part B.


The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part


* start placing the mask from this point

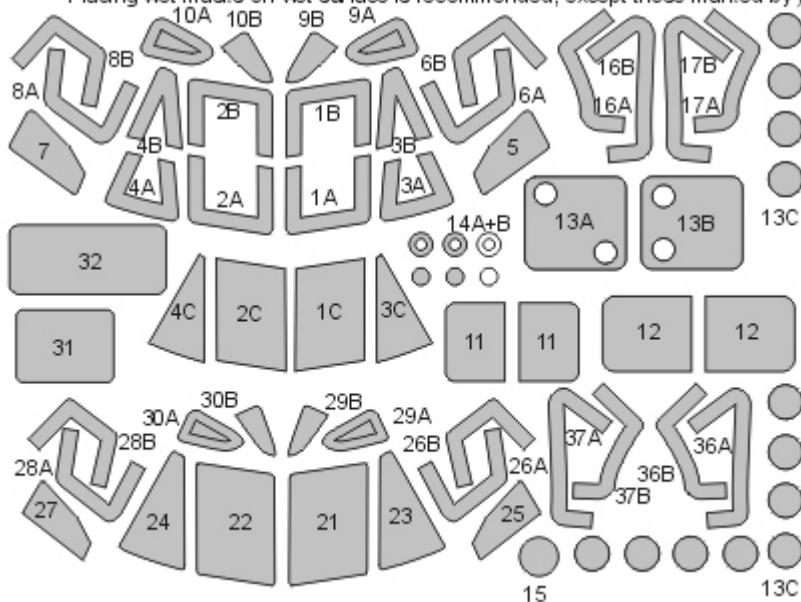Placing wet masks on wet surface is recommended, except those marked by **W**


white - spare parts

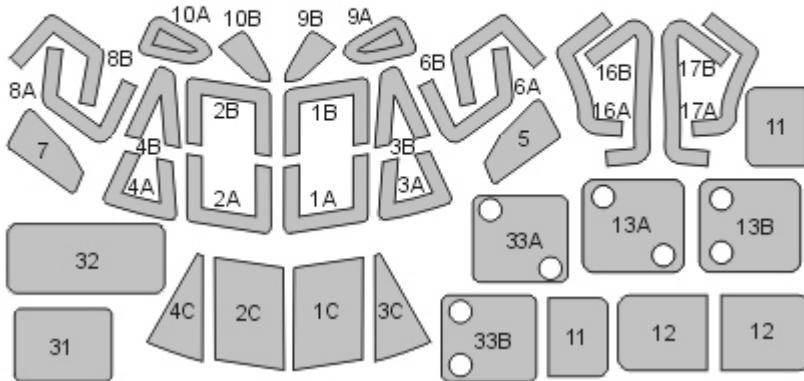


STEP 1
mask exterior, paint interior color

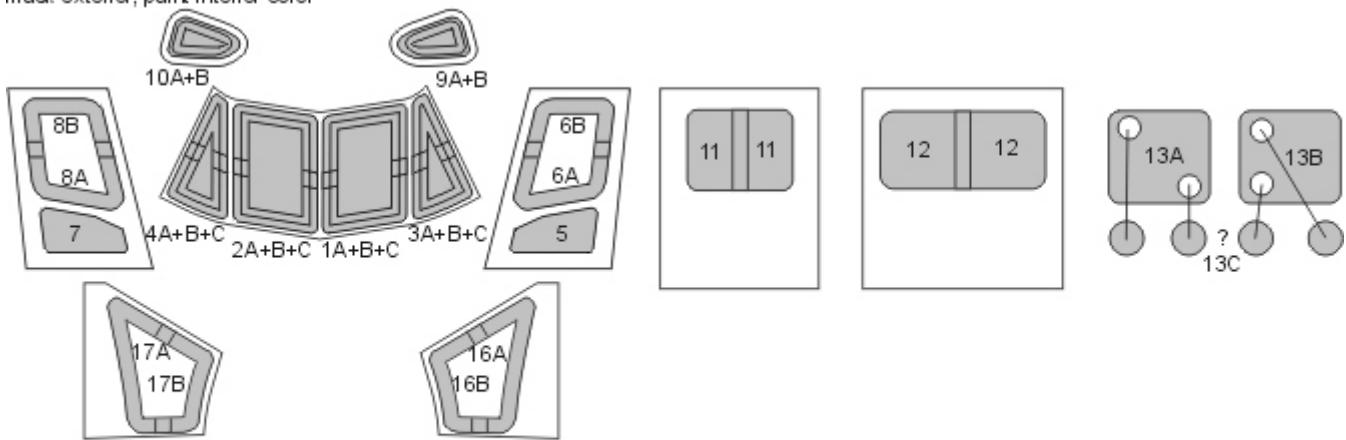

STEP 2
mask exterior, paint seal color (black)

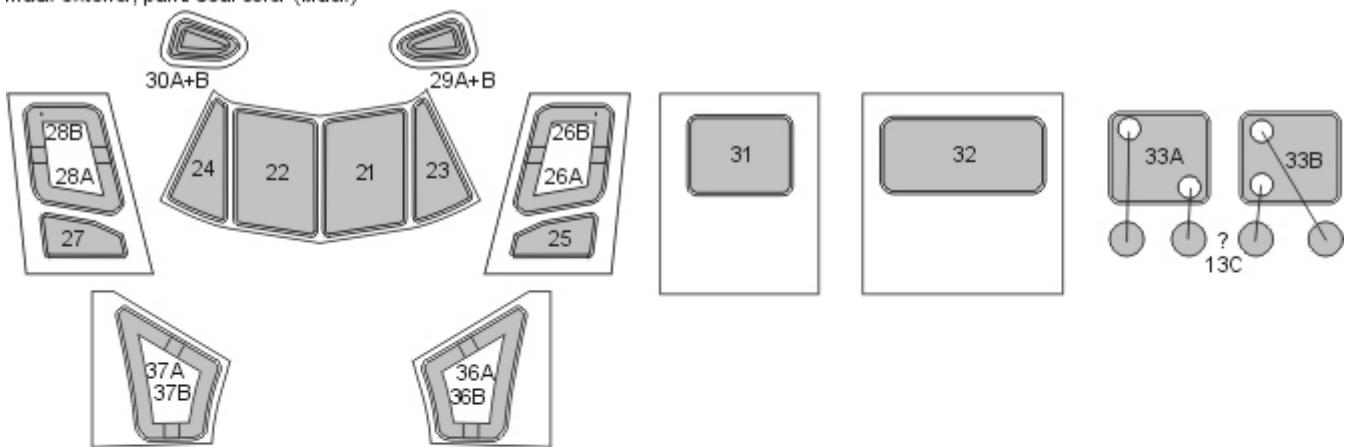

STEP 3
mask exterior, paint camouflage color

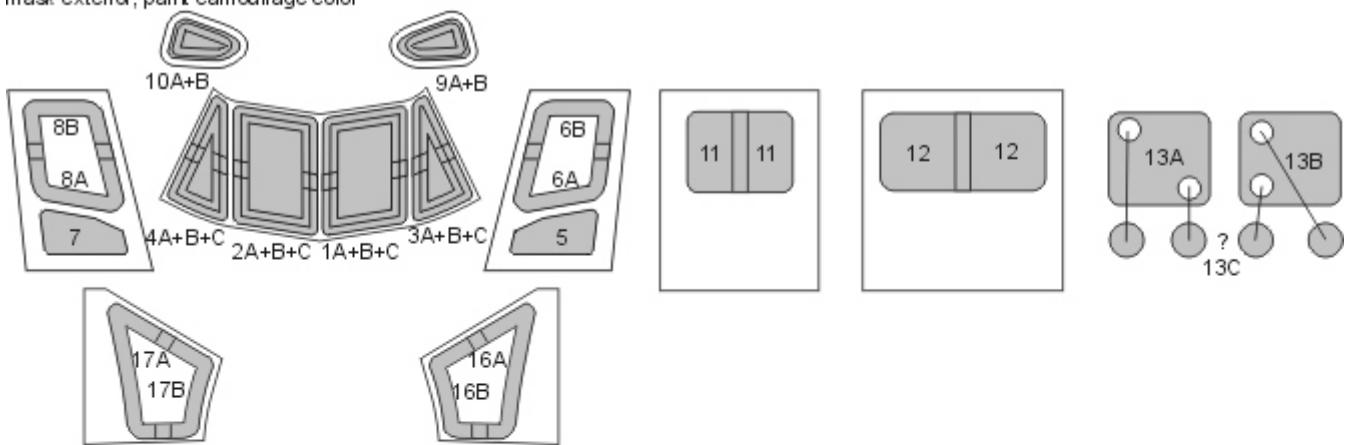

K A-6, A-10 K A-5

 14A+B  15

**Important:**

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.


K kit part

* start placing the mask from this point


Placing wet masks on wet surface is recommended, except those marked by **W**.

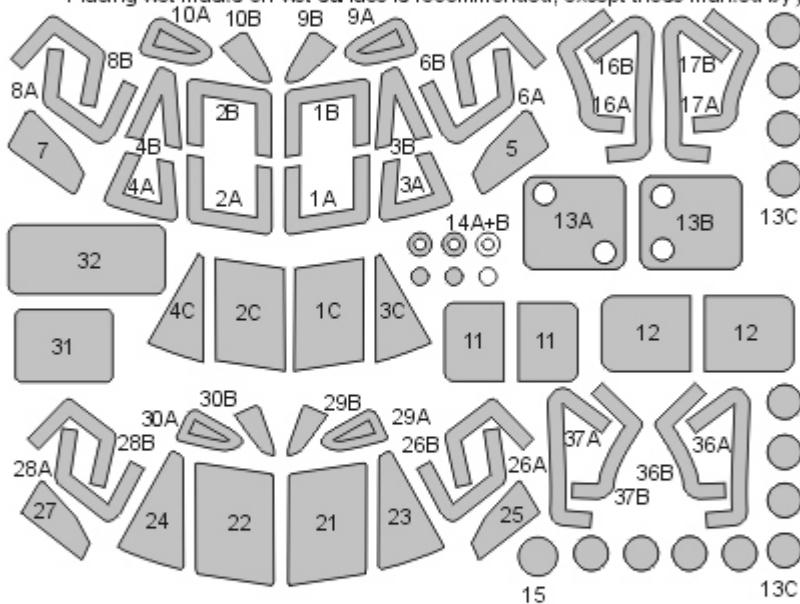


white - spare parts

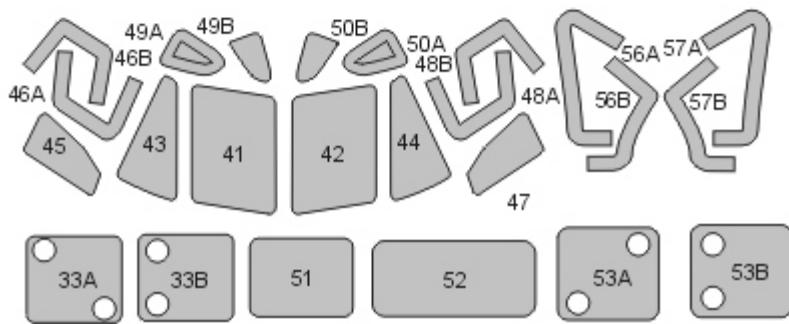


STEP 1 - exterior view
mask interior, paint interior color

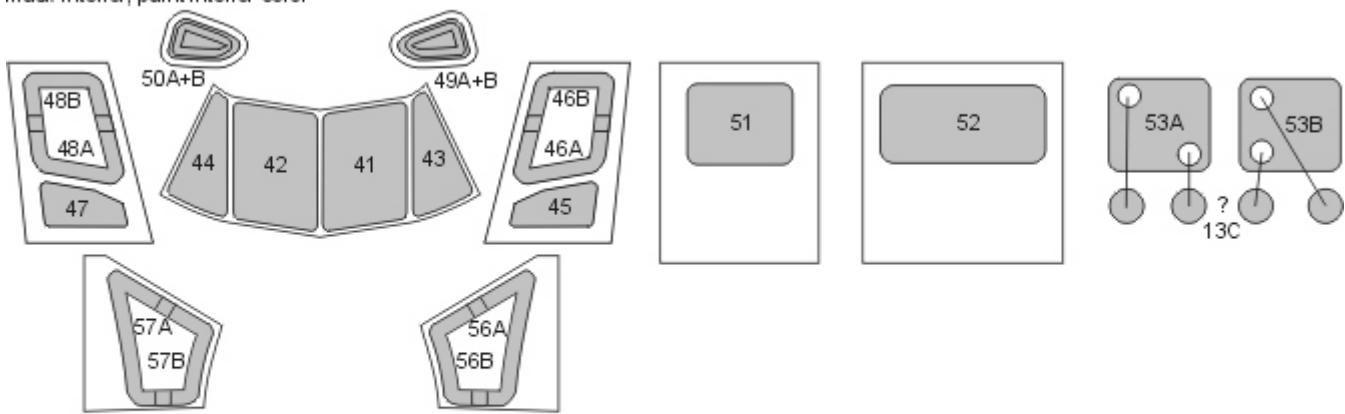

STEP 2
mask exterior, paint seal color (black)

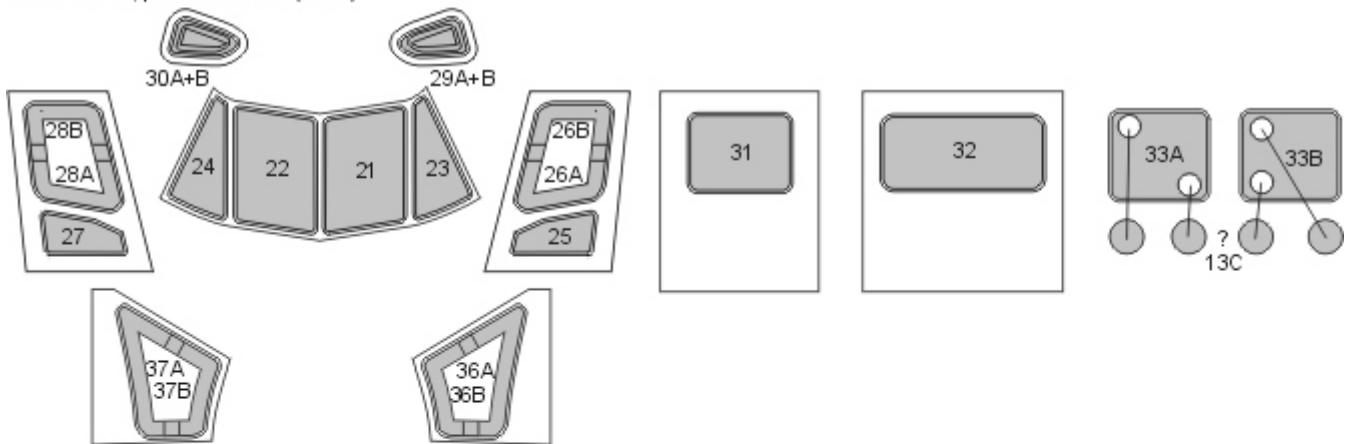

STEP 3
mask exterior, paint camouflage color

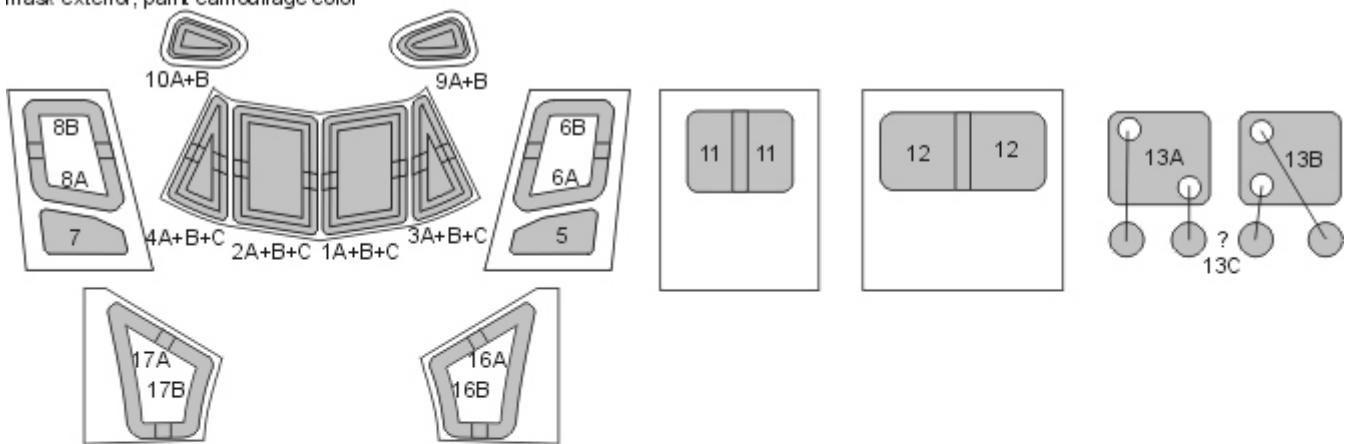

K A-6, A-10 K A-5





**A-10C Thunderbolt II BASIC kabuki masks
for G.W.H L4829 kit**

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.


K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**.

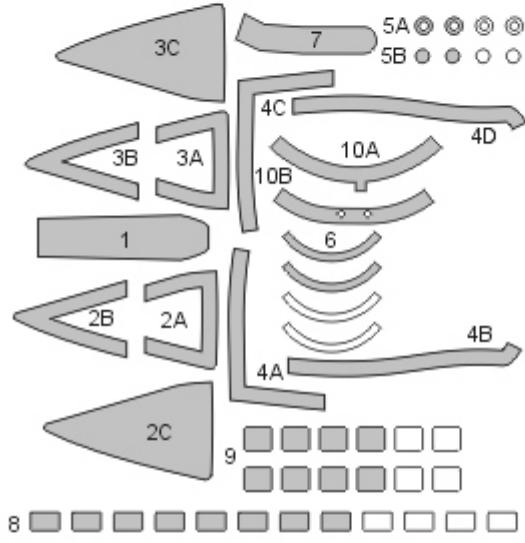

white - spare parts

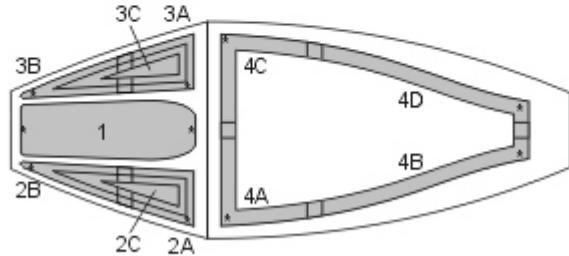

K Q2 K Q4, Q8 K Q9 K M11 K M12

W 5A+B

6

W


7

W

8

W

9

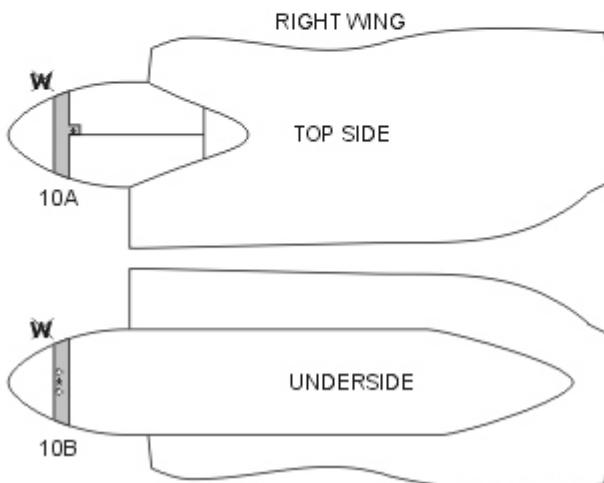



Includes also windows
inner side and bombs masks

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.



Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part


* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**.

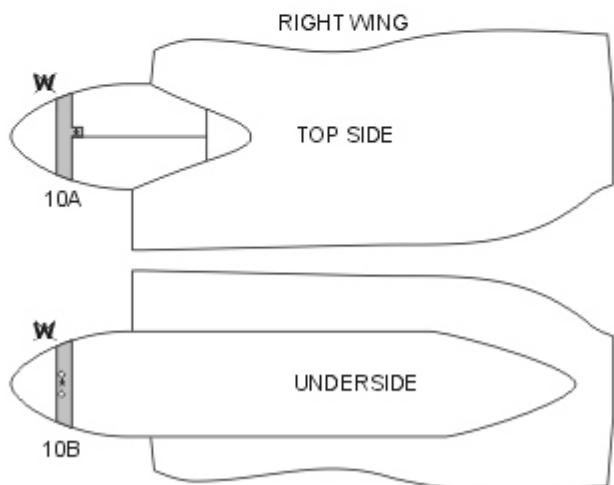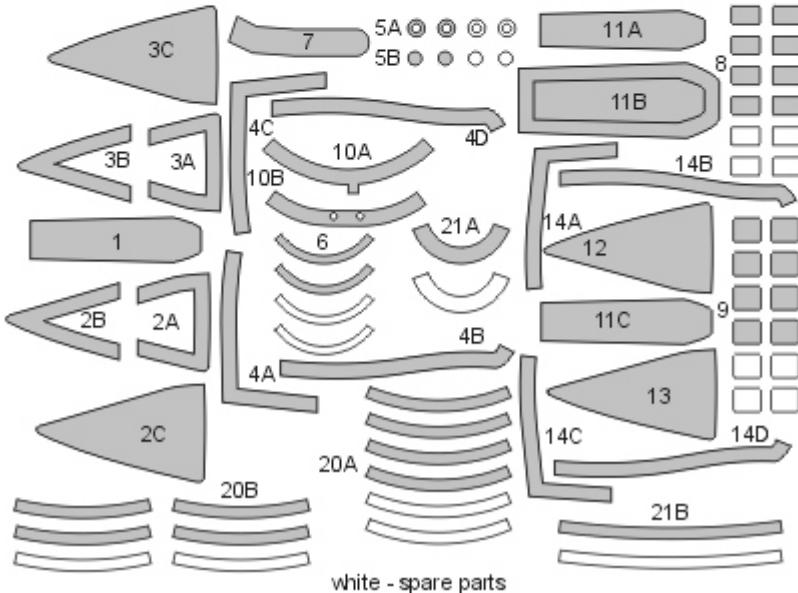


STEP 1 - exterior view
mask interior


paint frame color (yellow or red)

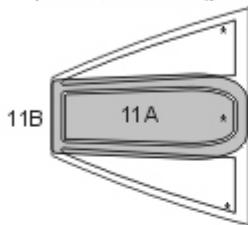

paint interior color

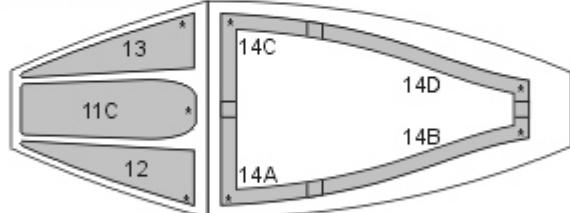

STEP 2
mask exterior, paint camouflage color

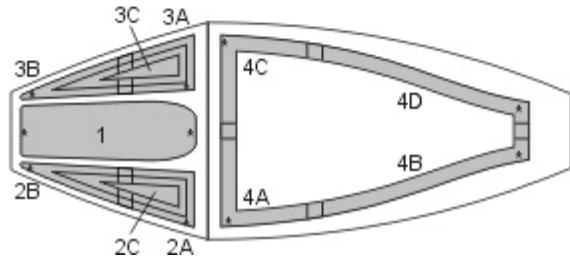


K Q2
W
5A+B

K Q4, Q8
W
6

K Q9
W
7

K M11
W
8

K M12
W
9

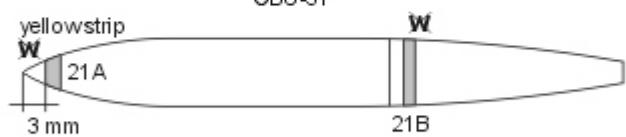



B-24H Liberator kabuki masks

for Airfix A09010 kit

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:


Let the sprayed color dry before applying masks. Remove masks very carefully after painting.

Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part




* start placing the mask from this point

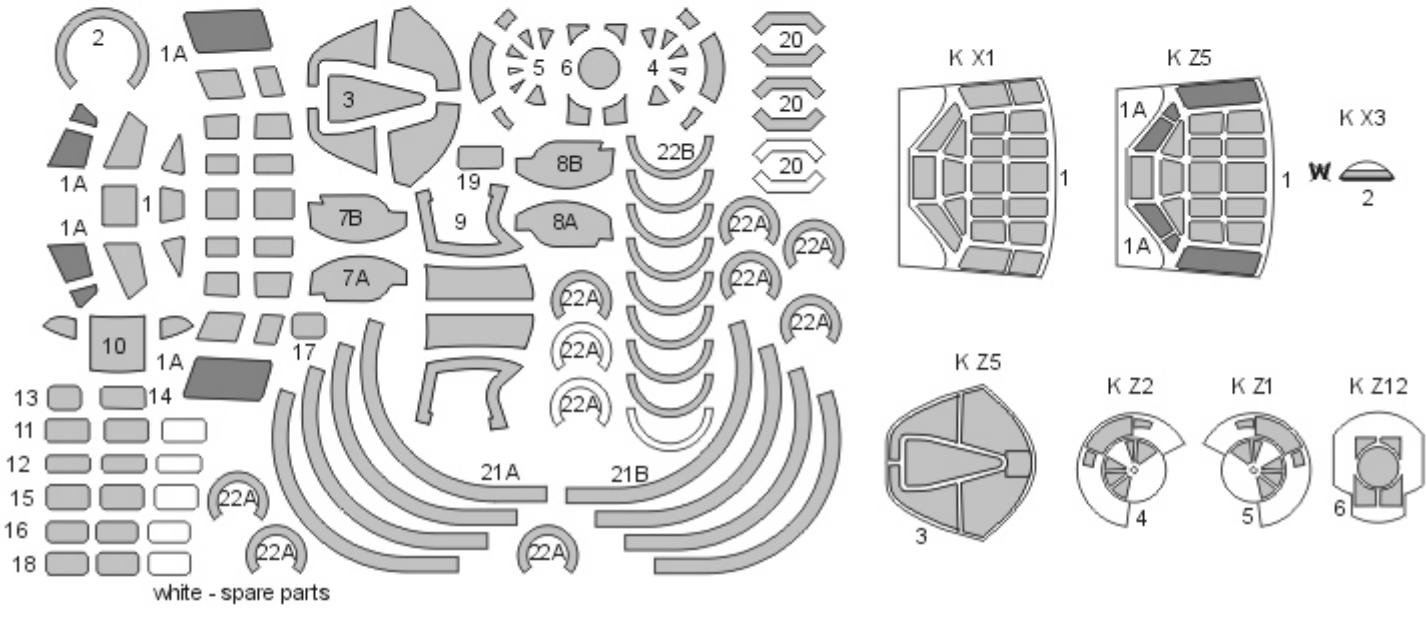Placing wet masks on wet surface is recommended, except those marked by **W**.

K X4, X5 K X7, X17 K X8 K X11 K X10, X12 K X15, X16



K X9 K X13, X14 K X18 K Z10, Z11

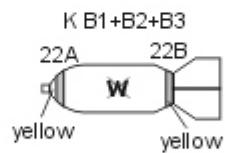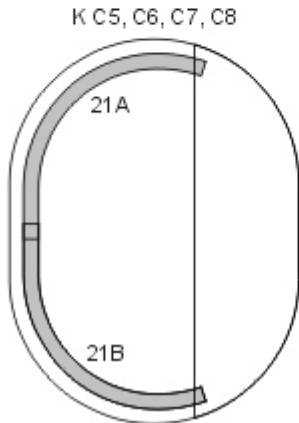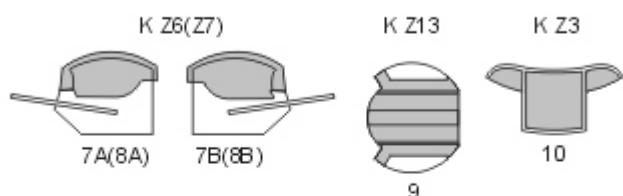



**B-24J Liberator BASIC kabuki masks
for HobbyBoss 81774 kit**

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.



Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**.

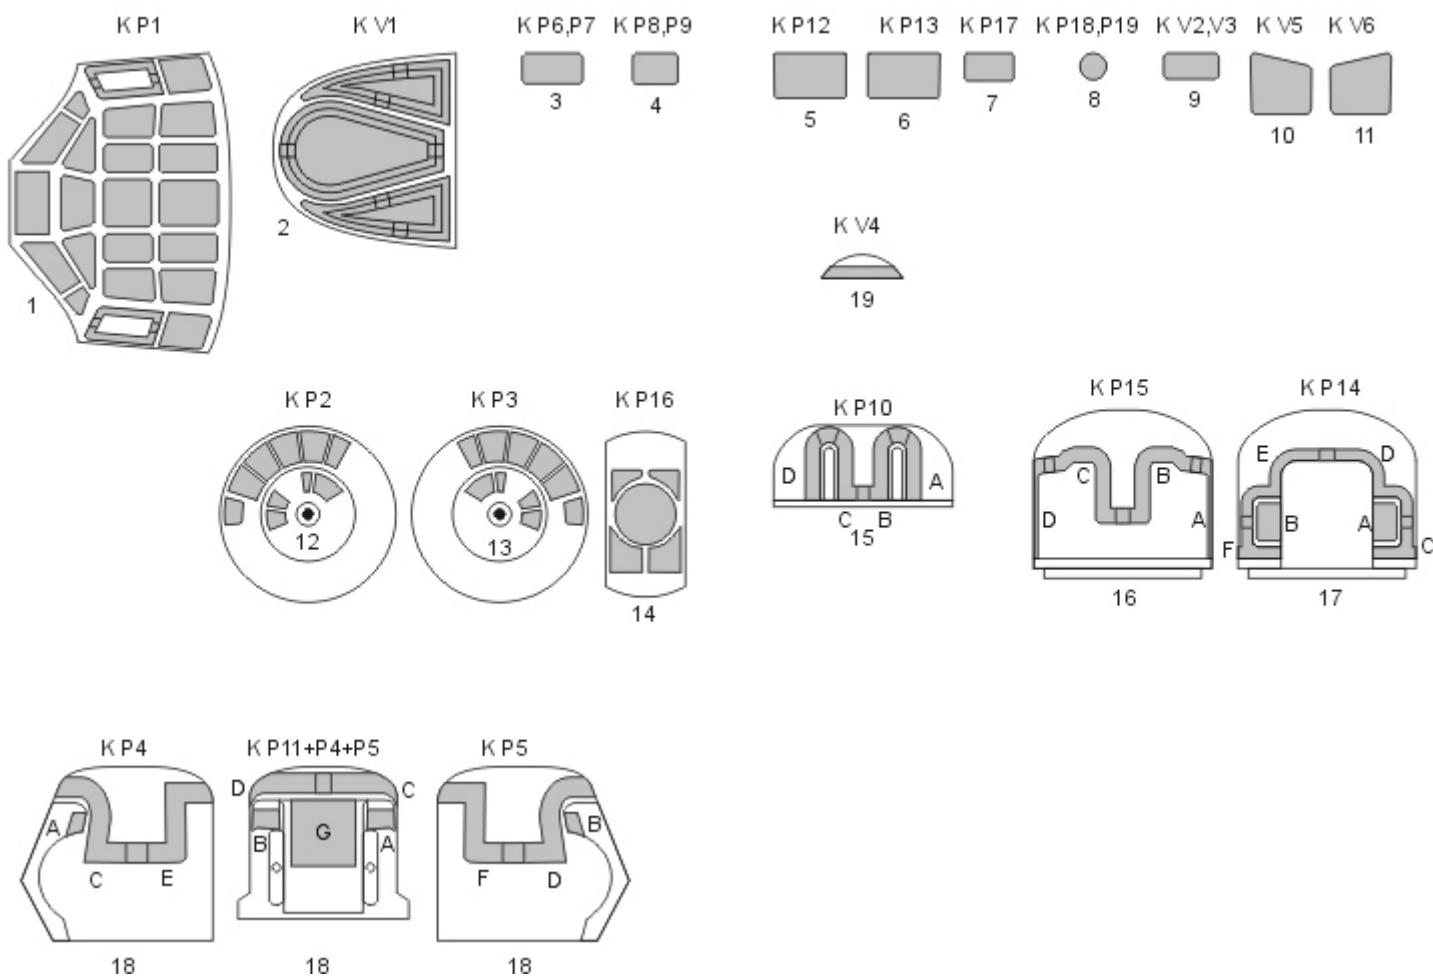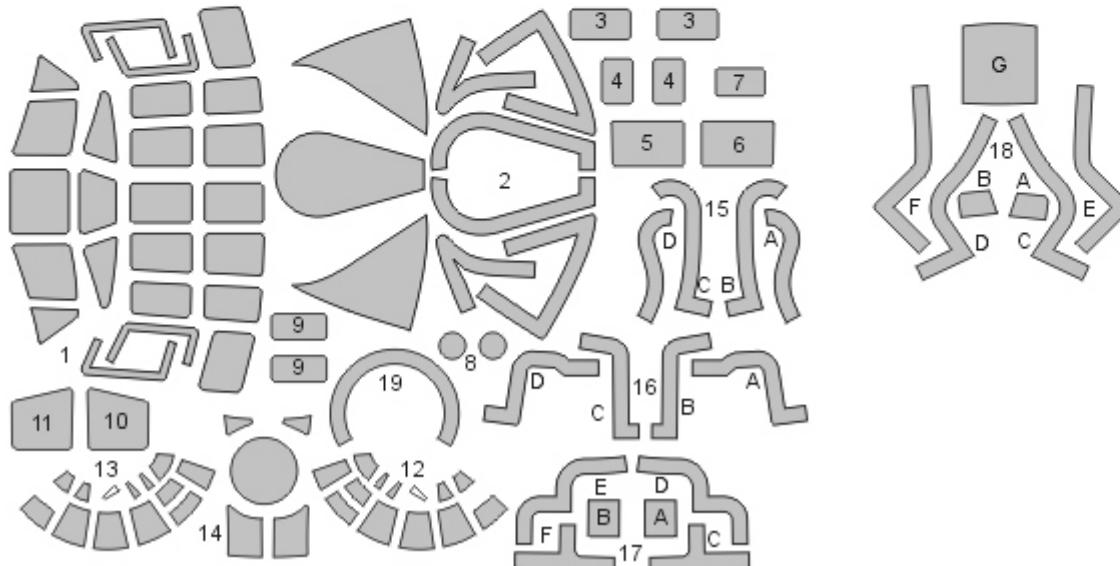

NWAM1230



B-24J Liberator EXPERT kabuki masks
for HobbyBoss 81774 kit

<http://mek.kosmo.cz/newware>

Includes also windows
inner side, yellow stripes on bombs
and camouflage details masks

1/48 scale

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.



Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.


K kit part

* start placing the mask from this point






Placing wet masks on wet surface is recommended, except those marked by **W**.

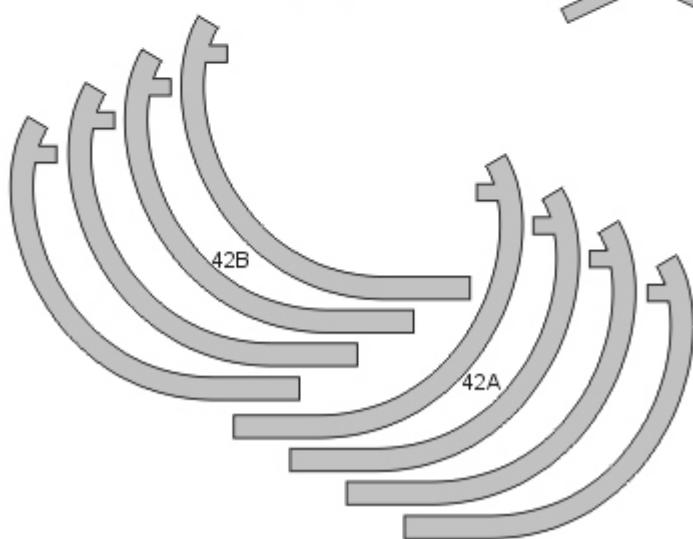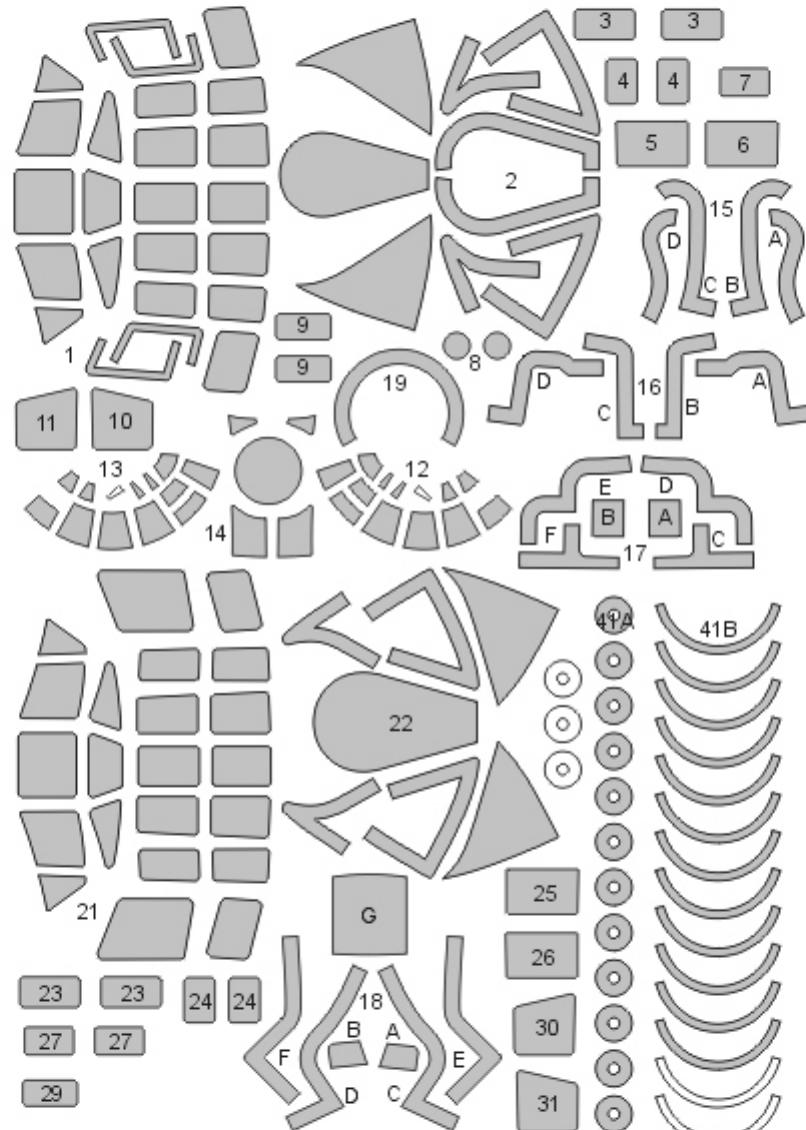

STEP 1 - exterior view
mask interior, paint interior color

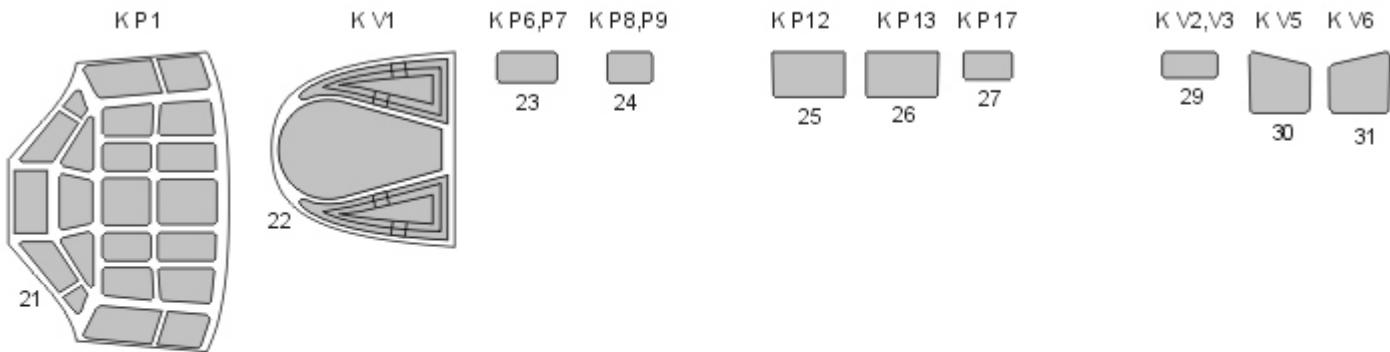

STEP 2
mask exterior, paint camouflage color

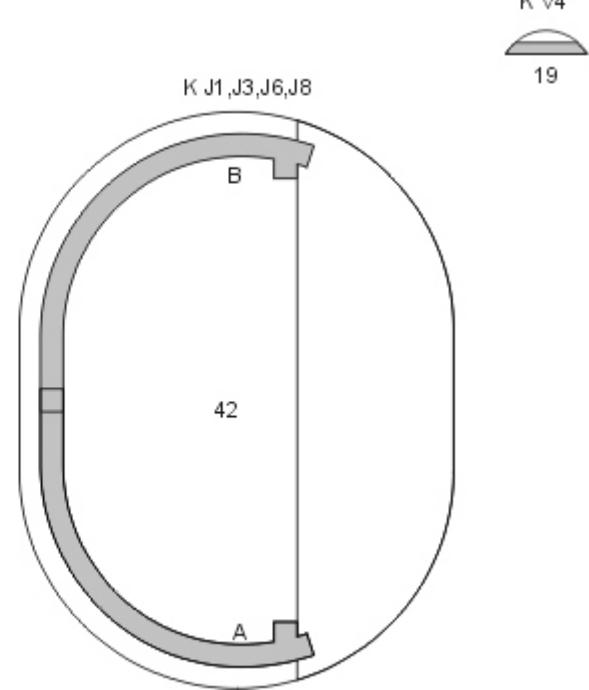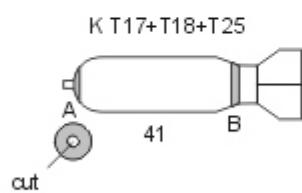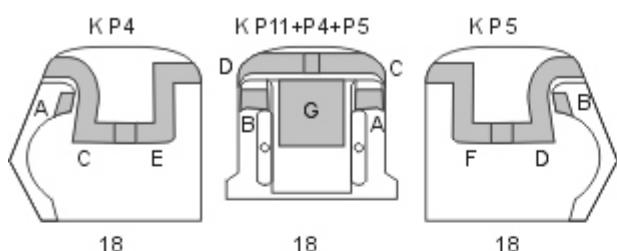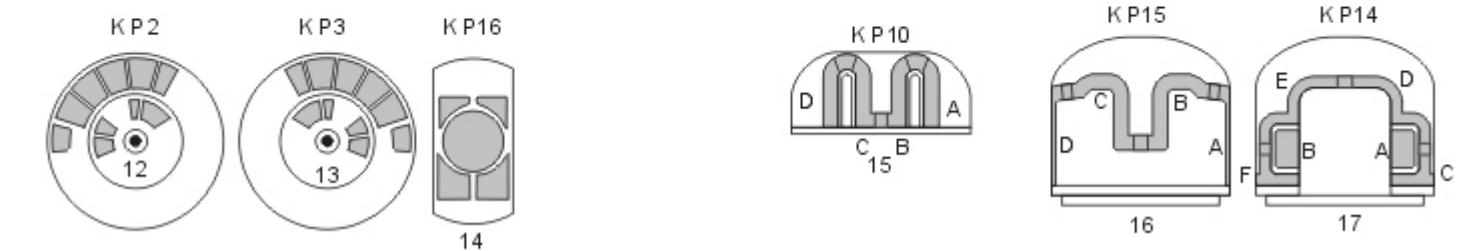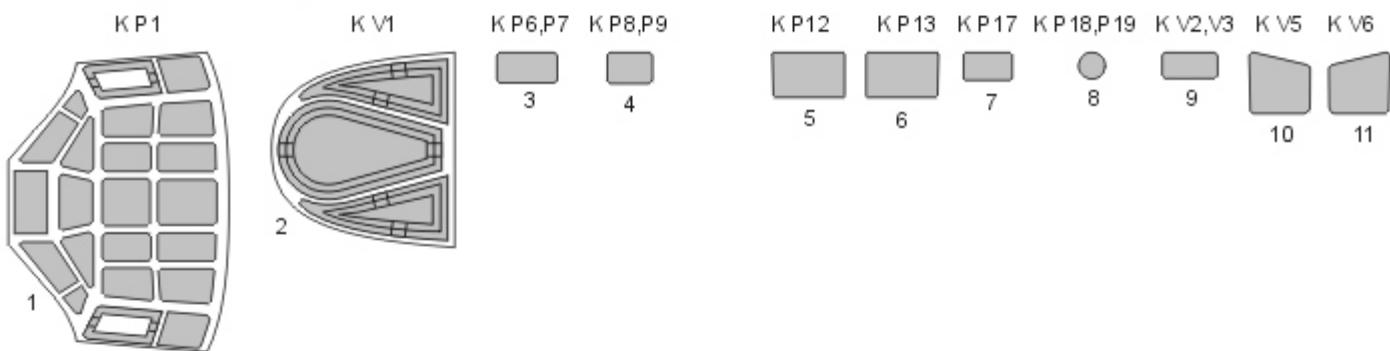



Mirage IVA/P BASIC kabuki masks
for Heller 80493, 56493, 52322 and 596 kits
<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.





Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**.

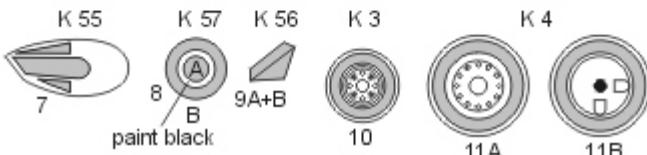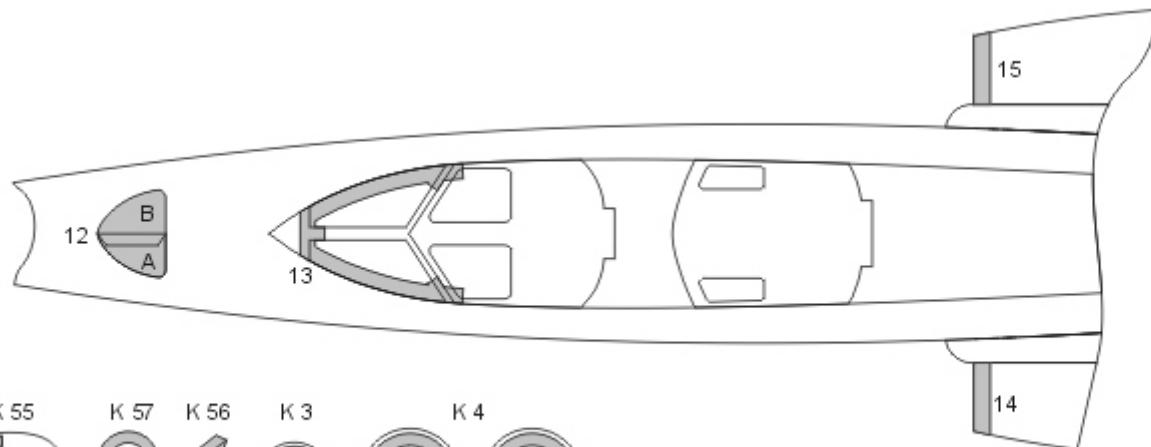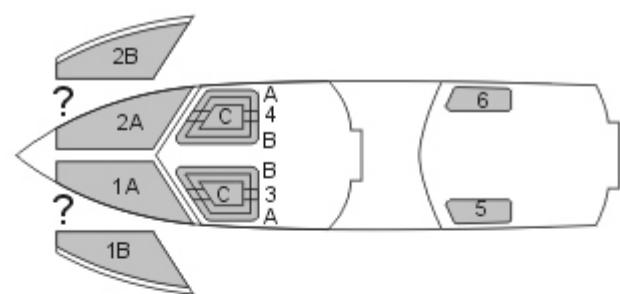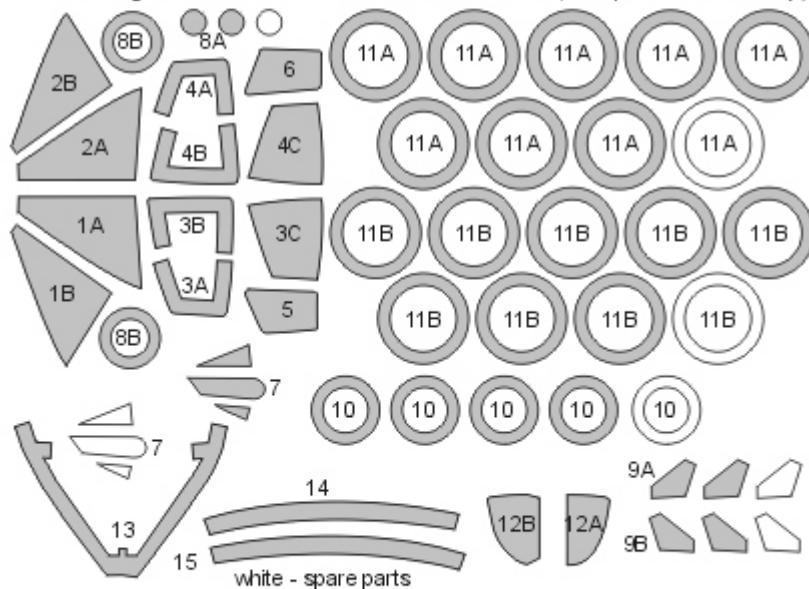



Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.


K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**.

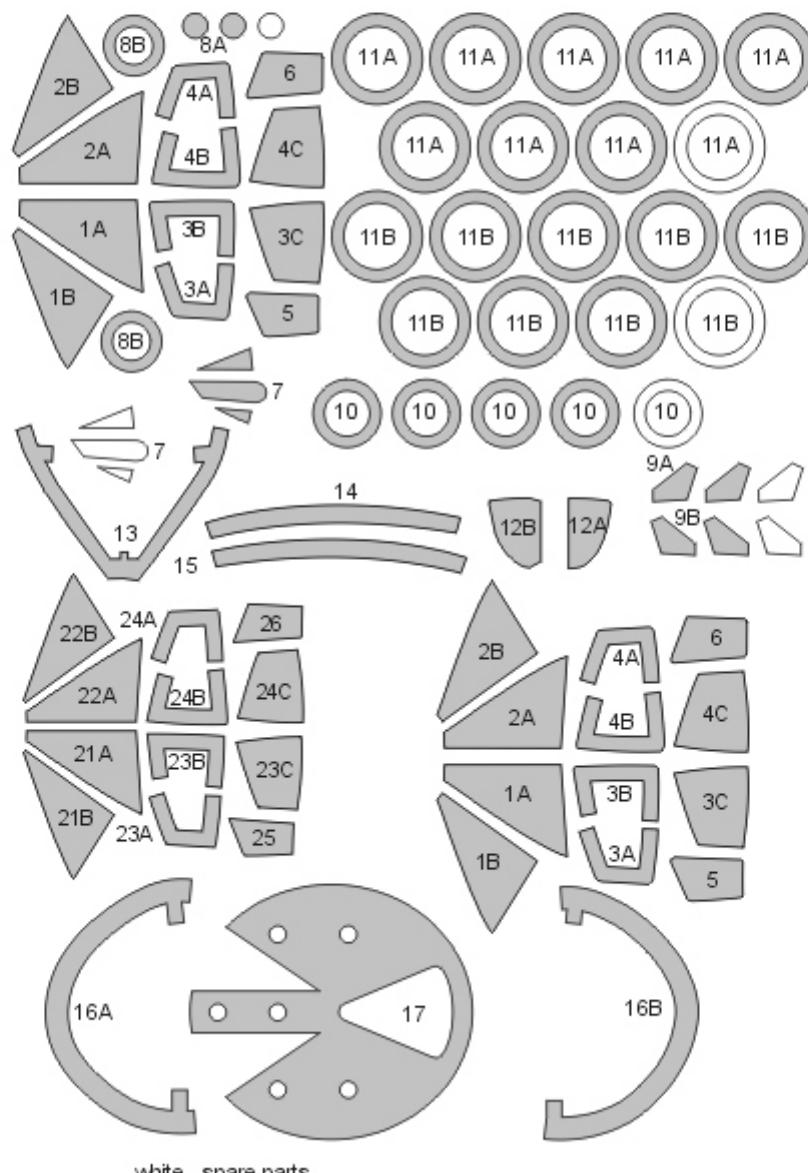


STEP 1
mask exterior, paint interior color



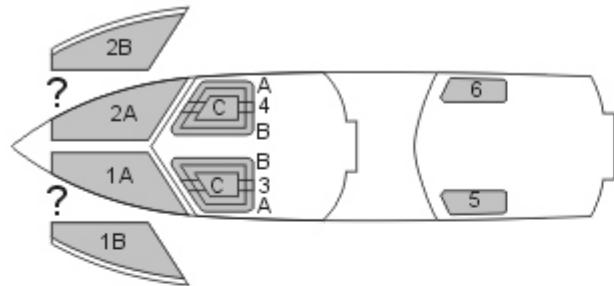


STEP 2
mask exterior, paint seal color

seal thickness 0,5 mm

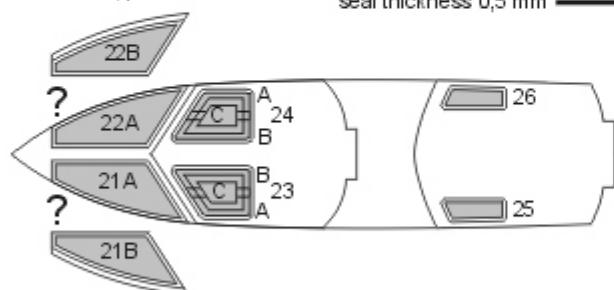

STEP 3
mask exterior, paint camouflage color

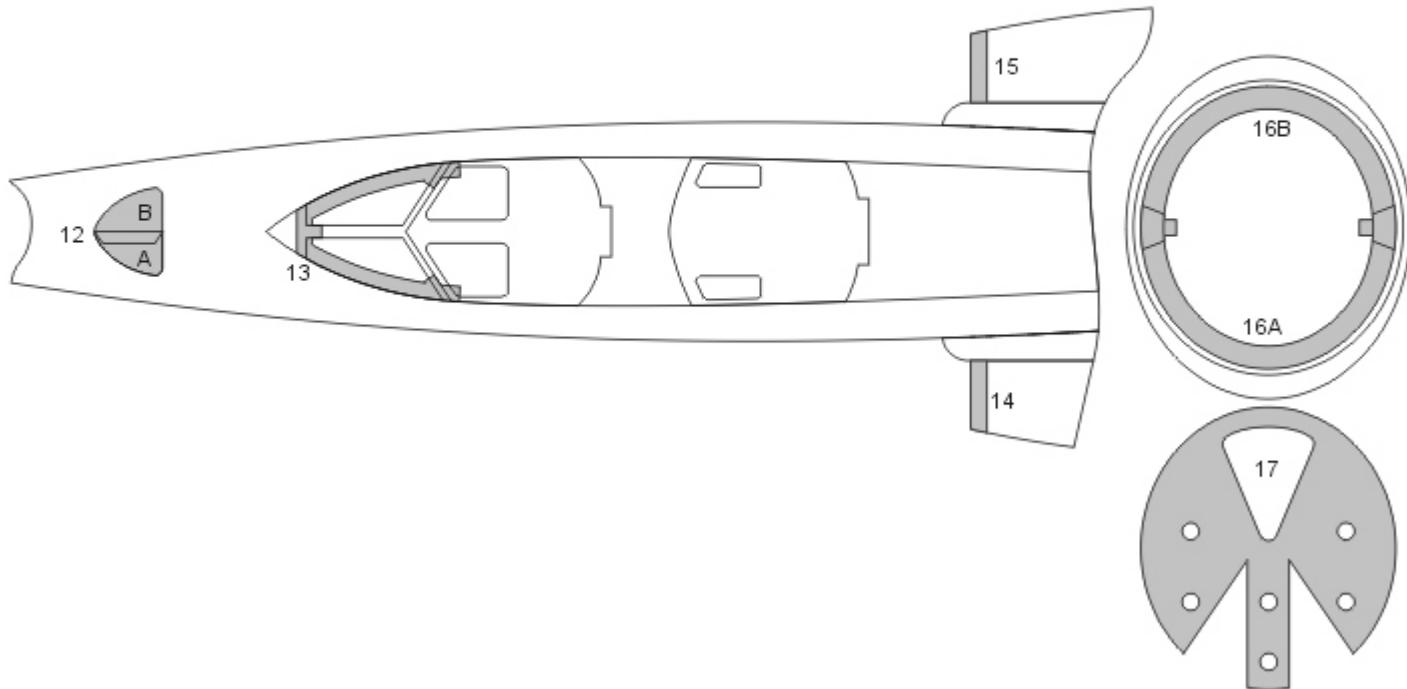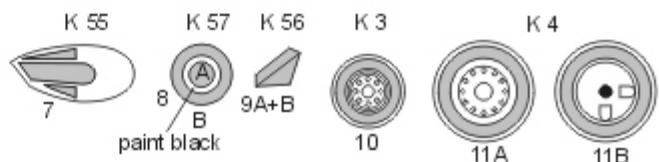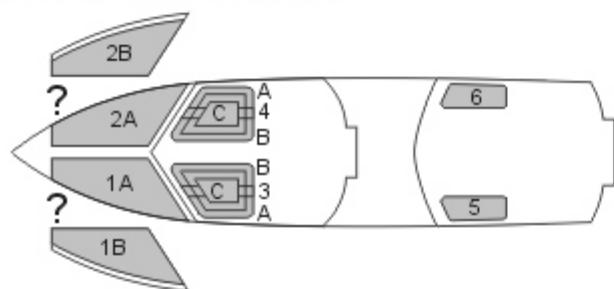



Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.


K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**.

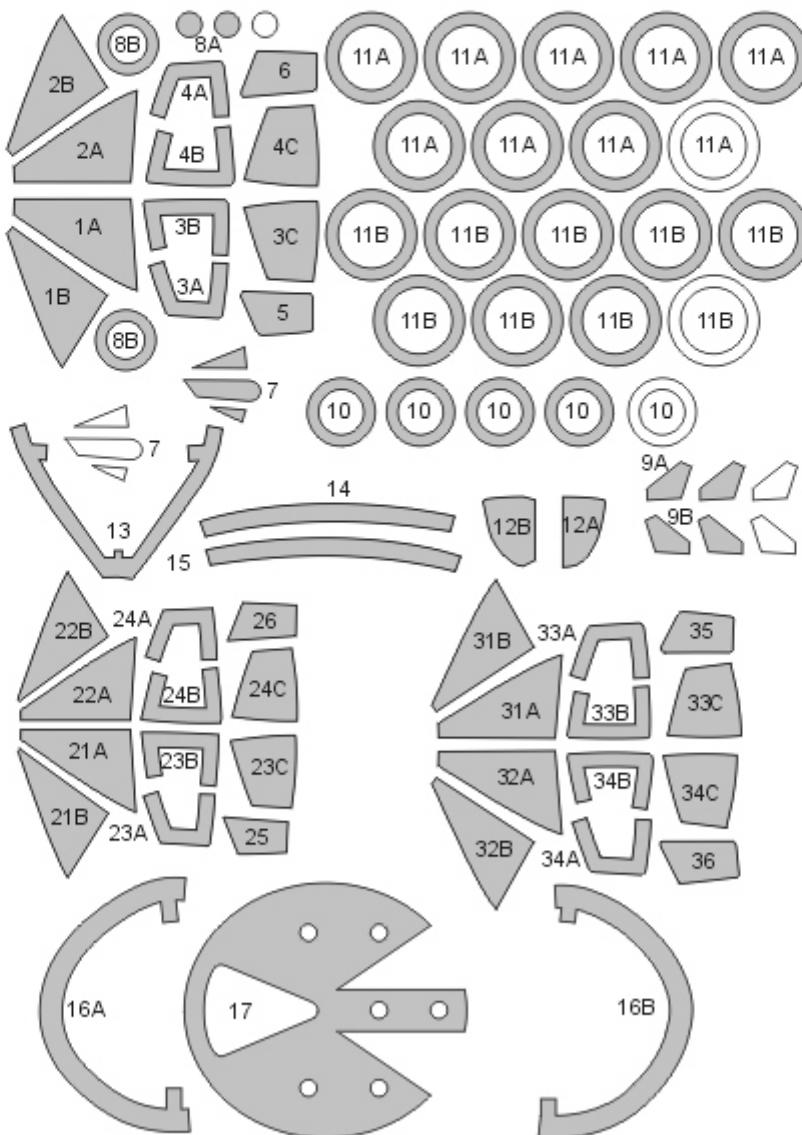


STEP 1 - exterior view
mask interior, paint interior color



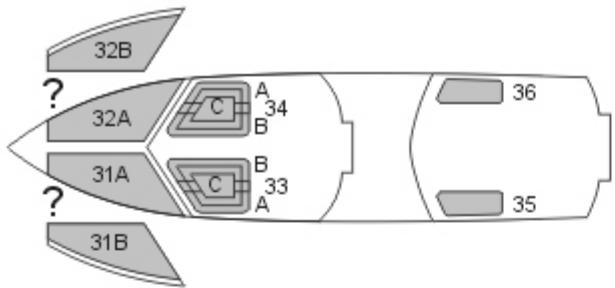


STEP 2
mask exterior, paint seal color

seal thickness 0,5 mm

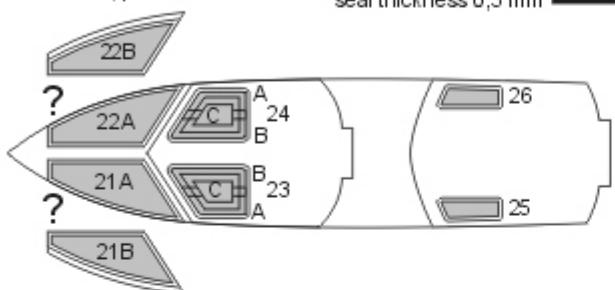

STEP 3
mask exterior, paint camouflage color

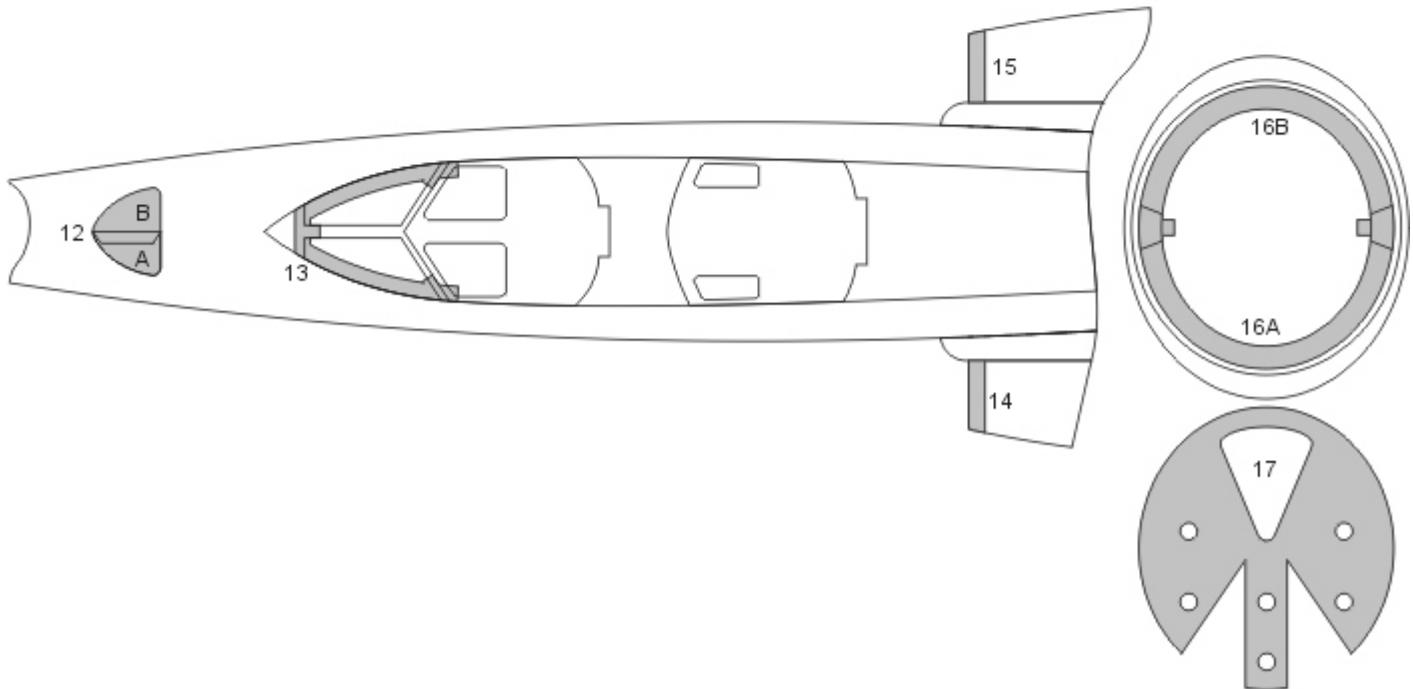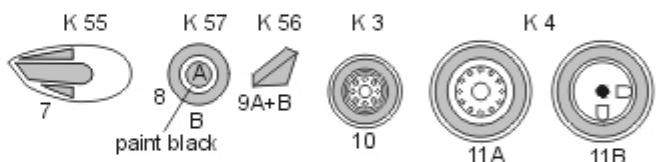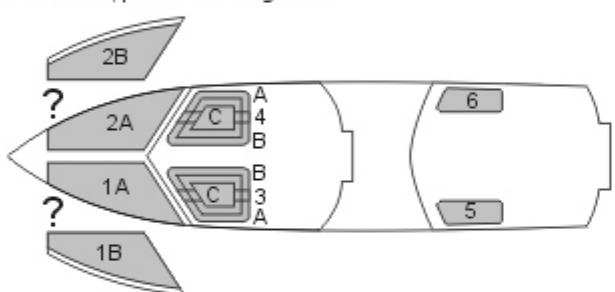



Ka-52 Alligator BASIC kabuki masks

for Zvezda 4830 kit

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:




Let the sprayed color dry before applying masks. Remove masks very carefully after painting.

Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point

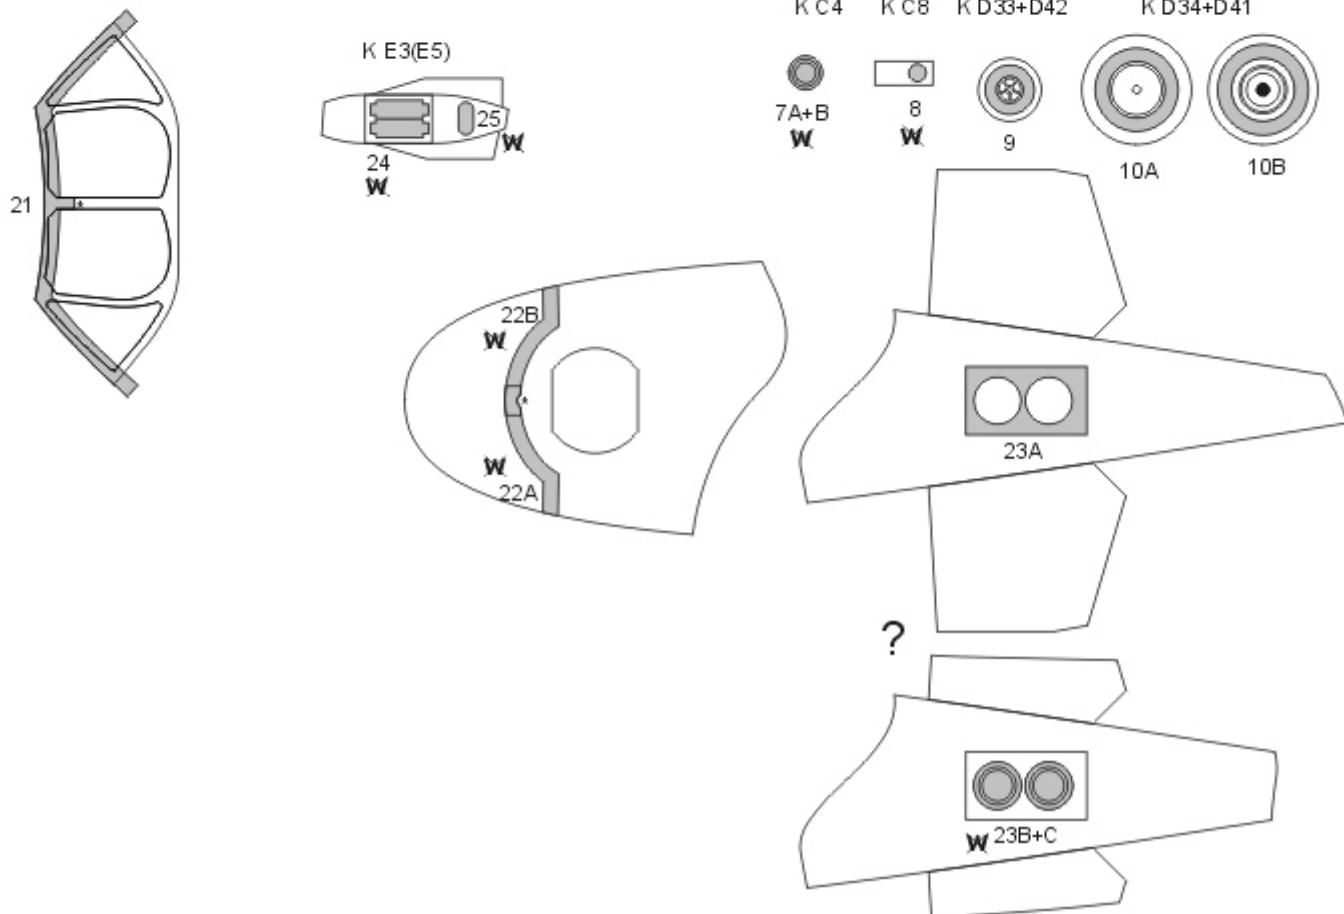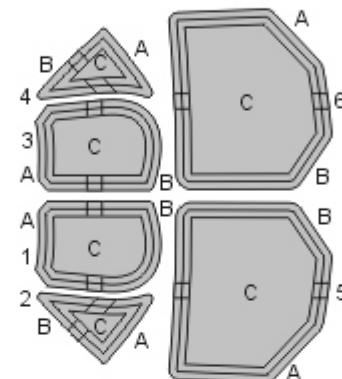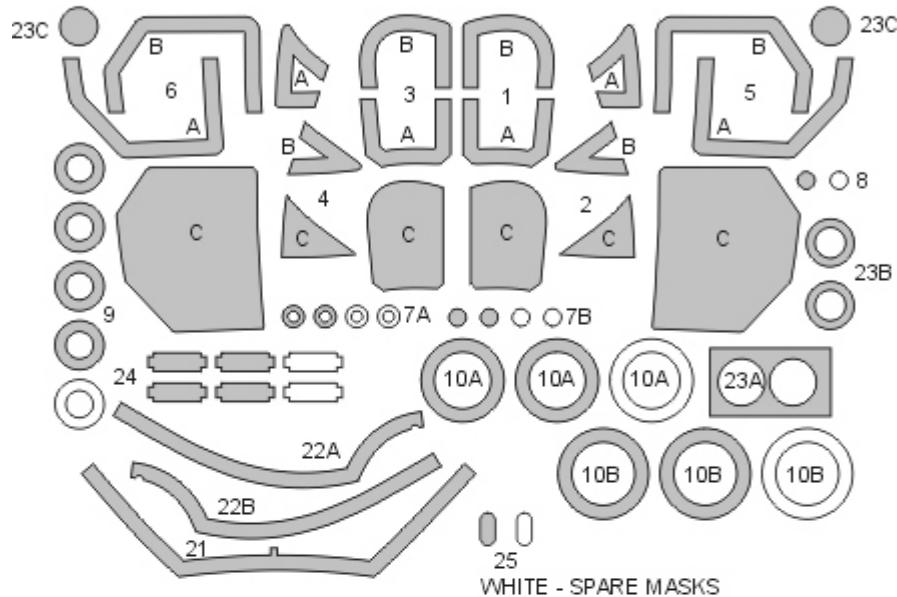Placing wet masks on wet surface is recommended, except those marked by **W**.



**Ka-52 Alligator EXPERT kabuki masks
for Zvezda 4830 kit**

<http://mek.kosmo.cz/newware>

Includes also windows
inner side masks

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.



Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.



K kit part

* start placing the mask from this point


Placing wet masks on wet surface is recommended, except those marked by **W**.

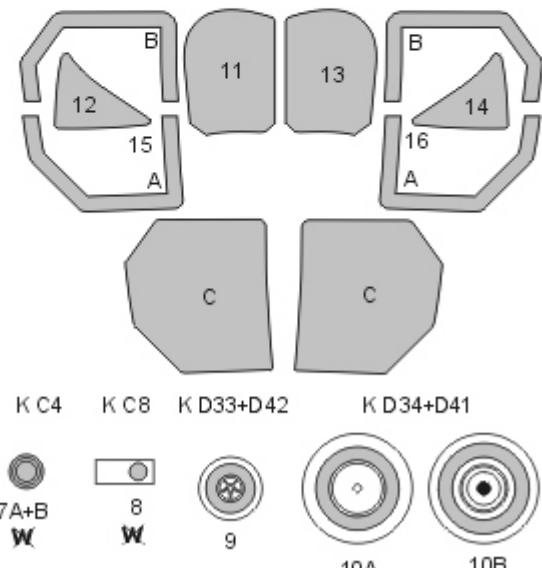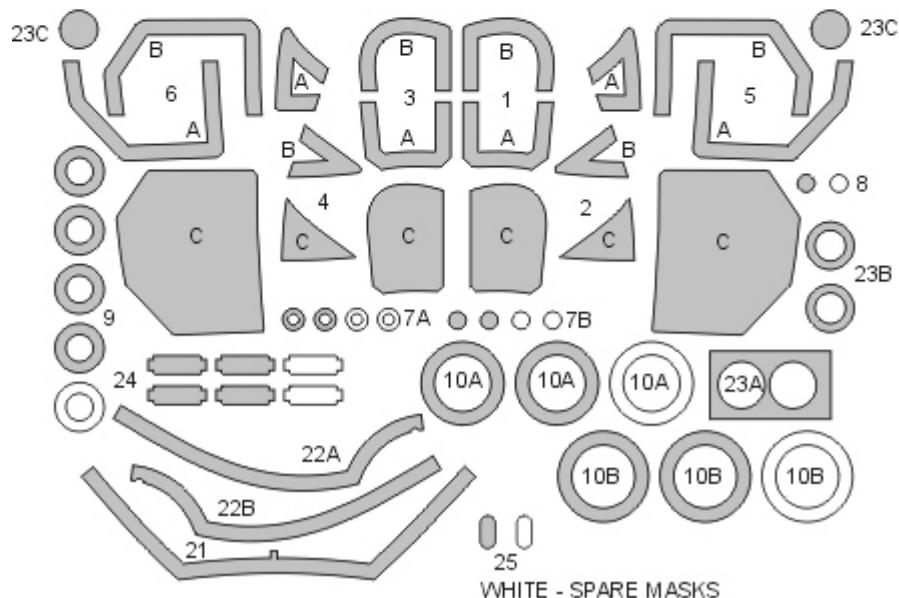

STEP 1 - exterior view
mask interior, paint interior color

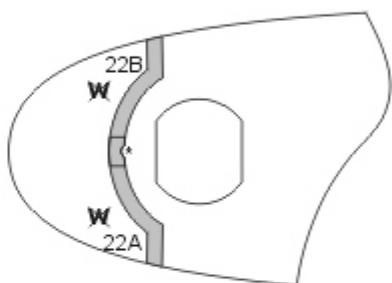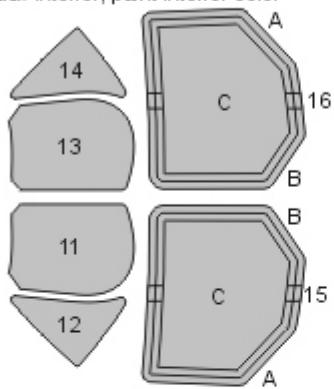

K E3(E5)

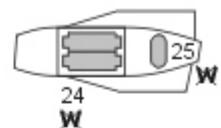

STEP 2
mask exterior, paint camouflage color

