



NEW WARE NEWSLETTER

NEW MASKS MARCH 2025

NWAM1284 1/48 Mi-24A Hind B BASIC kabuki masks	Trumpeter
NWAM1285 1/48 Mi-24A Hind B EXPERT kabuki masks	Trumpeter
NWAM1286 1/48 TA-4H/ J Skyhawk IAF BASIC kabuki masks	Hobby 2000
NWAM1287 1/48 TA-4H/ J Skyhawk IAF EXPERT kabuki masks	Hobby 2000
NWAM1288 1/48 Westland Lysander Mk.I & Mk.II BASIC kabuki masks	Airfix
NWAM1289 1/48 Westland Lysander Mk.I & Mk.II EXPERT kabuki masks	Airfix



Mi-24A Hind-B BASIC kabuki masks for Trumpeter 05828 kit

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.



Where the mask is divided into A and B parts, first apply part A, next part B. This is done by dividing the mask into two parts, A and B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**

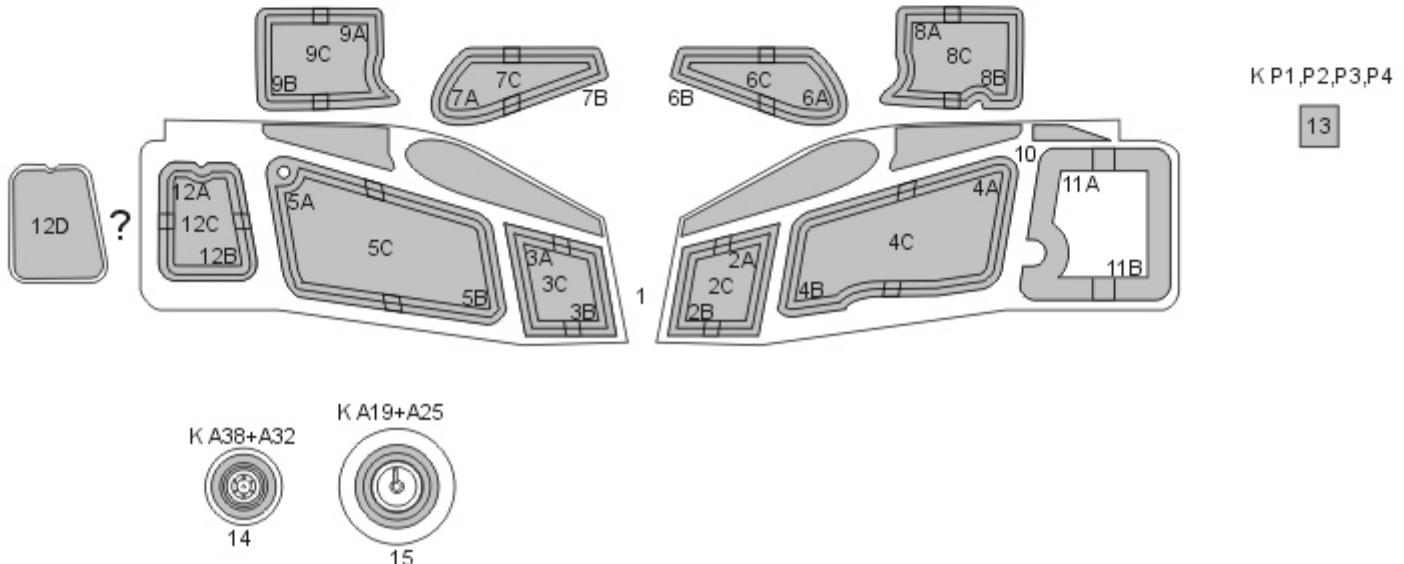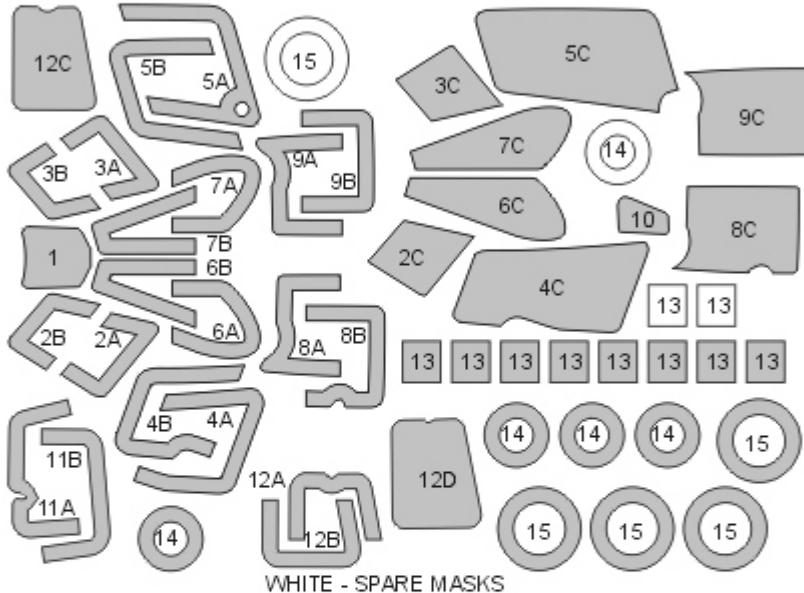



**Mi-24A Hind-B EXPERT kabuki masks
for Trumpeter 05828 kit**
<http://mek.kosmo.cz/newware>

INCLUDES ALSO WINDOWS
INNER SIDE AND CAMOUFLAGE
DETAILS MASKS

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.



Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.


K kit part

* start placing the mask from this point




Placing wet masks on wet surface is recommended, except those marked by **W**.

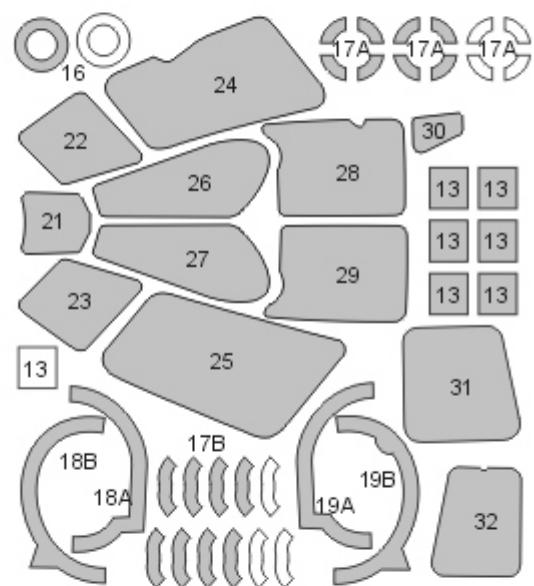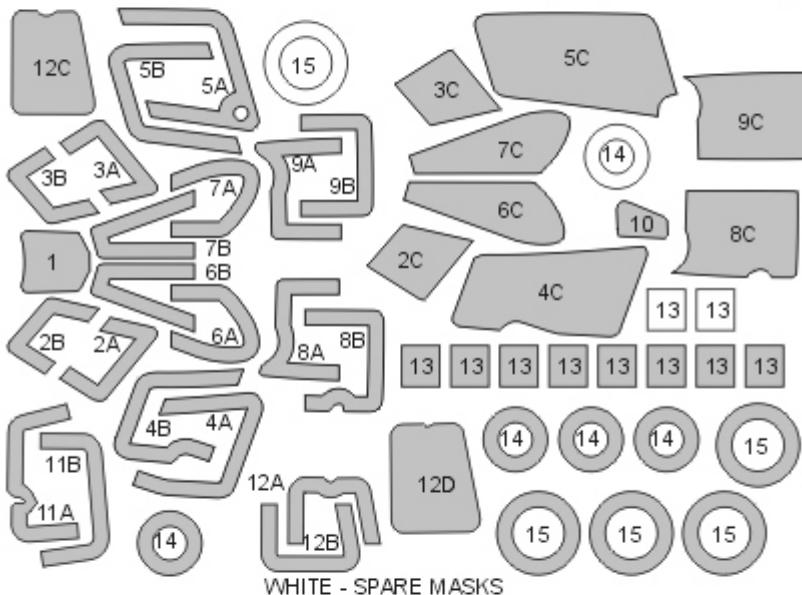

STEP 1 - exterior view
mask interior, paint interior color

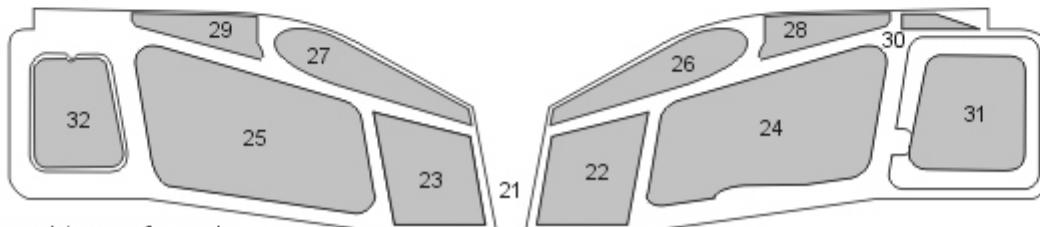

STEP 2
mask exterior, paint camouflage color

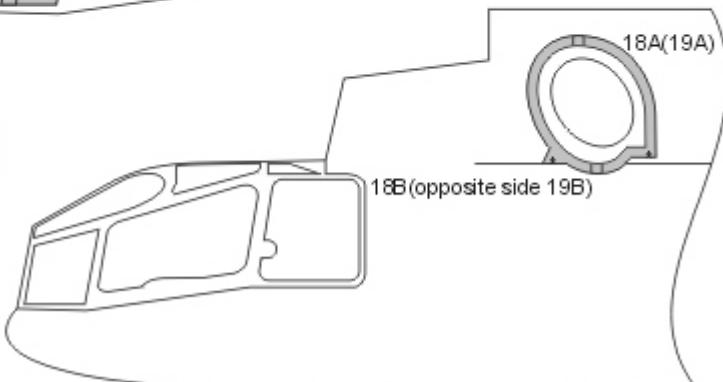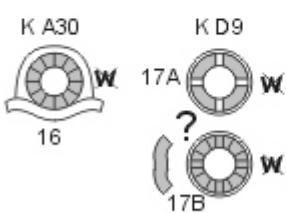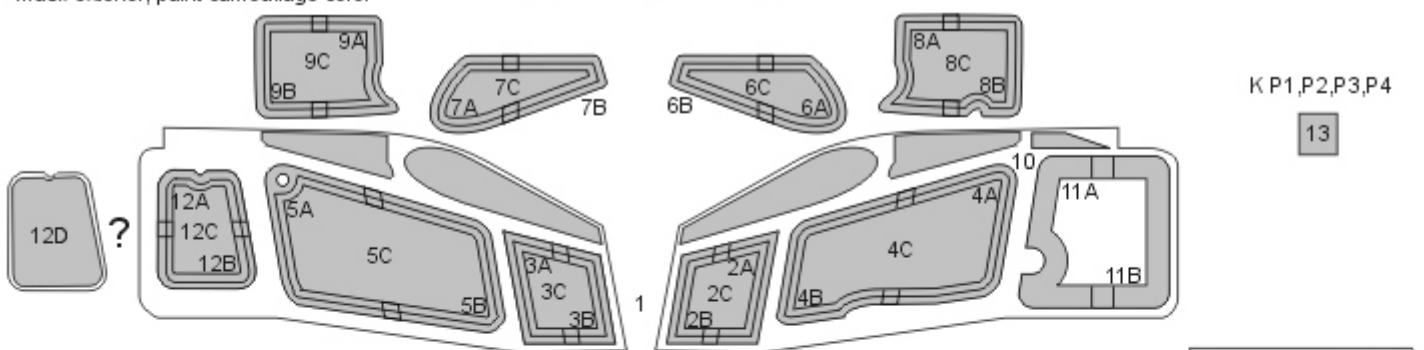



TA-4H/J Skyhawk IAF BASIC kabuki masks for Hobby 2000 48035 kit

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.


K kit part

* start placing the mask from this point


Placing wet masks on wet surface is recommended, except those marked by **W**

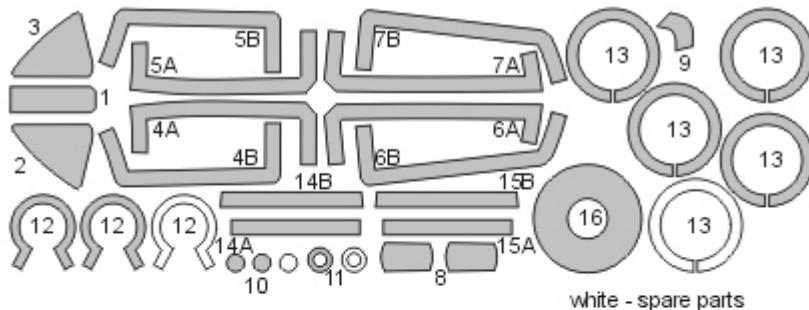


white - spare parts

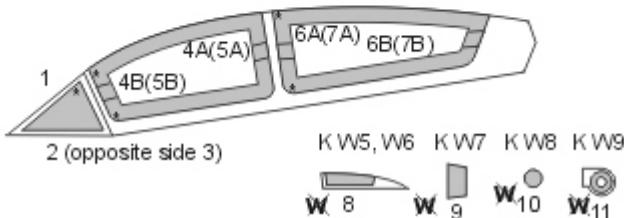

W8 W9 W10 W11

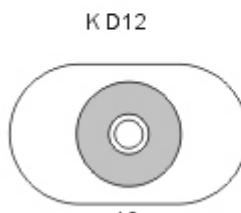

16

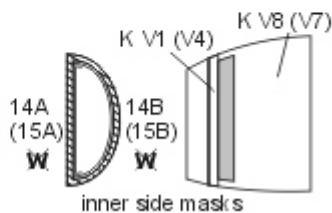

inner side masks

NWAM1287

1/48 scale



TA-4H/J Skyhawk IAF EXPERT kabuki masks
for Hobby 2000 48035 kit
<http://mek.kosmo.cz/newware>

INCLUDES ALSO WINDOWS
INNER SIDE AND CAMOUFLAGE
DETAIL MASKS

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point



Placing wet masks on wet surface is recommended, except those marked by **W**.

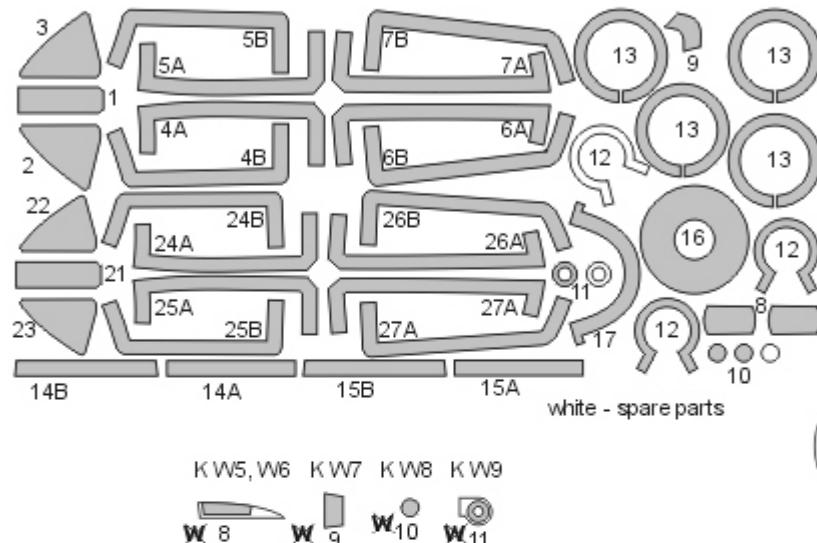


K E43 K F18+F20





K D12

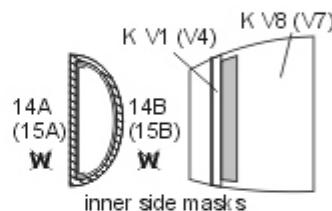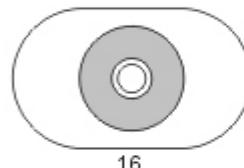

STEP 1 - exterior view
mask interior
paint interior color

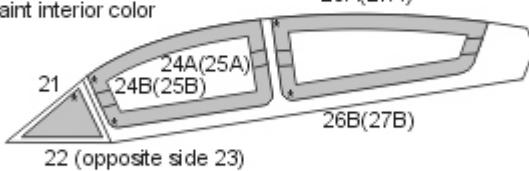

STEP 2
mask exterior
paint camouflage color

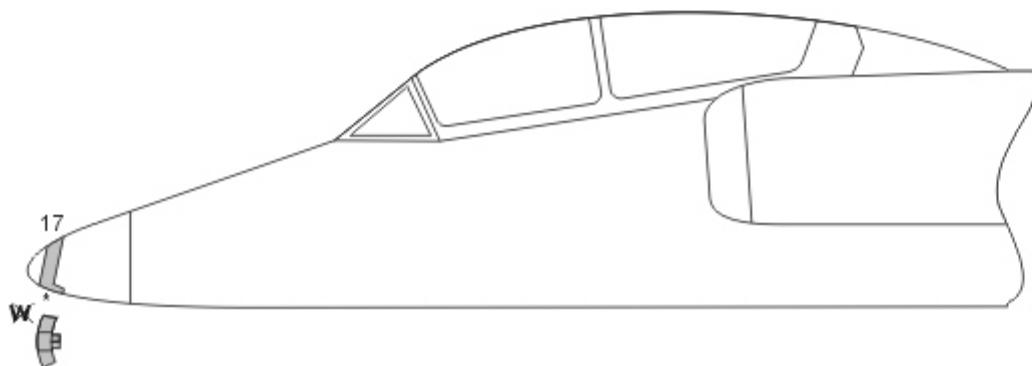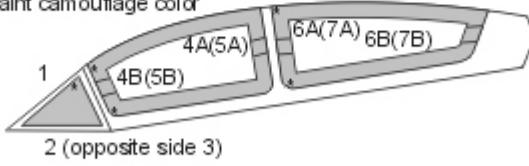

NWAM1288

1/48 scale



Westland Lysander Mk.I & Mk.III BASIC kabuki masks

for Airfix A07116 kit

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:

Important: Let the sprayed color dry before applying masks. Remove masks very carefully after painting.




Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.


K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**

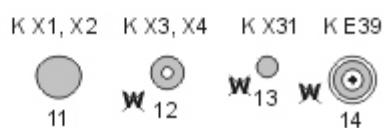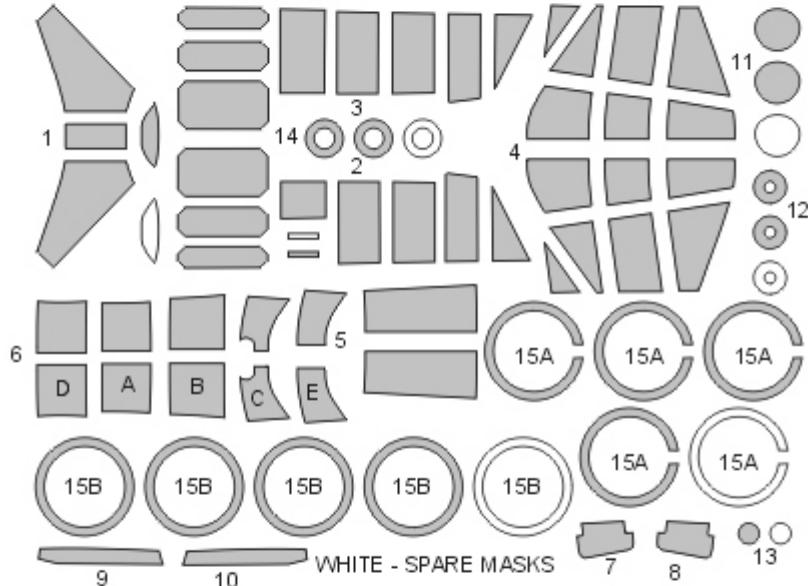


K E44+E46+E30+E32 K E44+E46+E34+E37

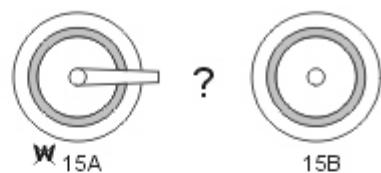


K X22

K X14, X8, X11, X6


K X18, X19, X17, X16

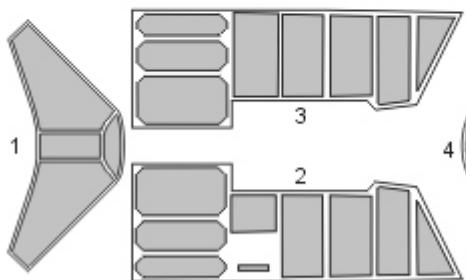

K X13, X7, X12, X5

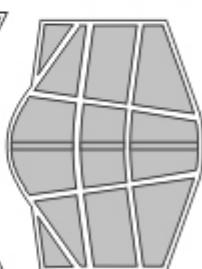

K X23

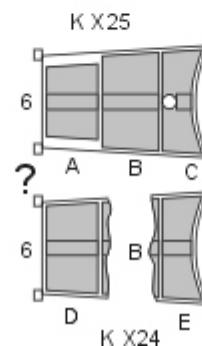

**Important:**

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.




Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.



K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**.

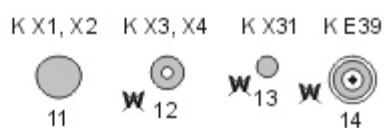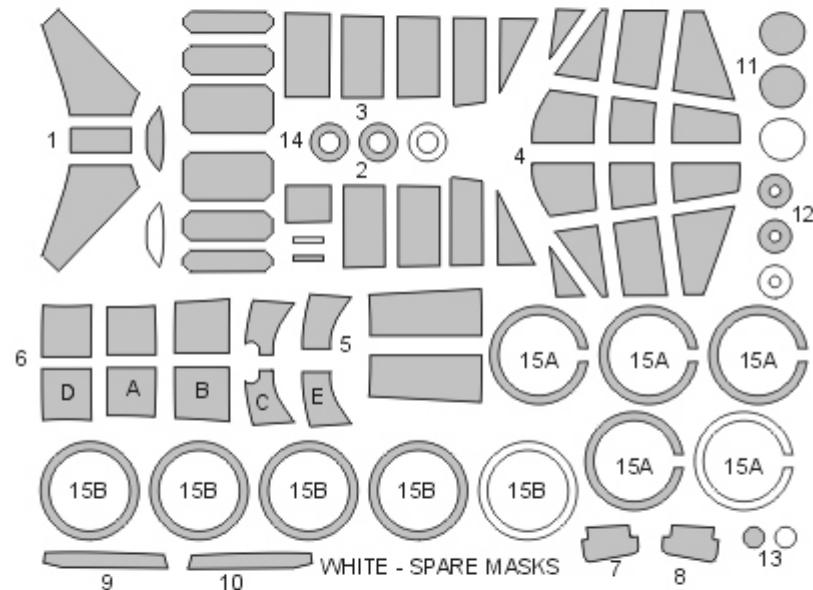


K E 44+E46+E30+E32 K E 44+E 46+E34+E37

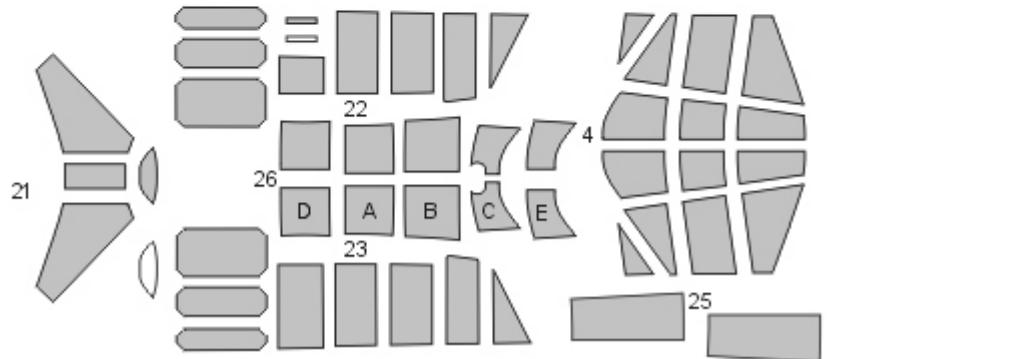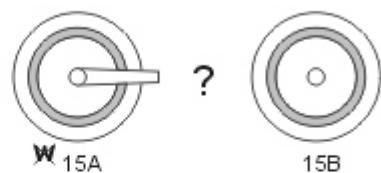

K X22 K X14, X8, X11, X6 K X18, X19, X17, X16

K X23 K X25


STEP 1 - exterior view
mask interior

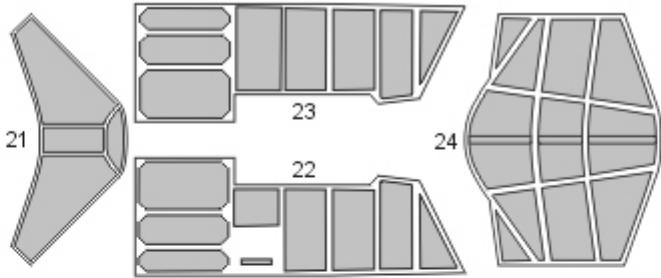

K X13, X7, X12, X5



K X25

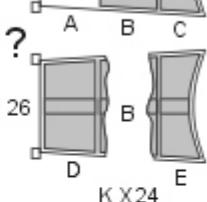


K X22 K X14, X8, X11, X6 K X18, X19, X17, X16

K X23

K X25

STEP 2
mask exterior

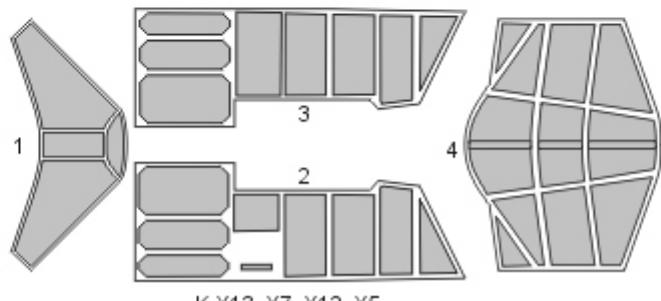

K X13, X7, X12, X5

