



NEW WARE NEWSLETTER

NEW MASKS APRIL 2025

NWAM1290 1/48 B-26G Marauder BASIC kabuki masks	ICM
NWAM1291 1/48 B-26G Marauder EXPERT kabuki masks	ICM
NWAM1292 1/48 Hurricane Mk.I, Mk.IC, Mk.IID BASIC kabuki masks	Hobby Boss
NWAM1293 1/48 Hurricane Mk.I, Mk.IC, Mk.IID EXPERT kabuki masks	Hobby Boss
NWAM1294 1/72 Yak-1 kabuki masks	Zvezda
NWAM1295 1/48 Ju 88 WWII USAAF/RAF bomber BASIC kabuki masks	ICM
NWAM1296 1/48 Ju 88 WWII USAAF/RAF bomber EXPERT kabuki masks	ICM
NWAM1297 1/48 Antonov AN-2/AN-2CX/AN-2M Colt BASIC kabuki masks	Hobby Boss
NWAM1298 1/48 Antonov AN-2/AN-2CX/AN-2M Colt EXPERT kabuki masks	Hobby Boss



Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.






K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**

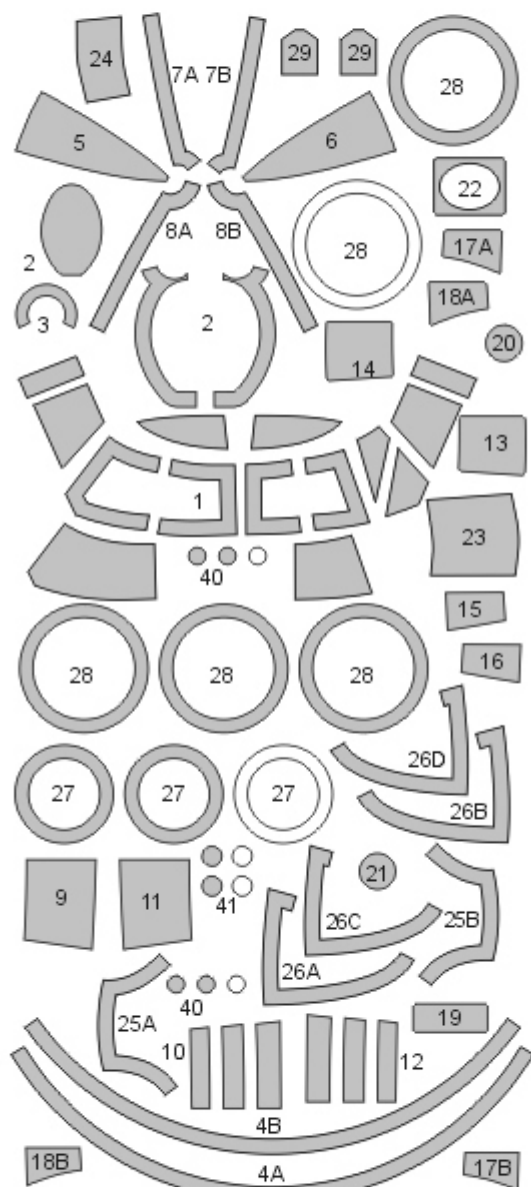

white - spare parts

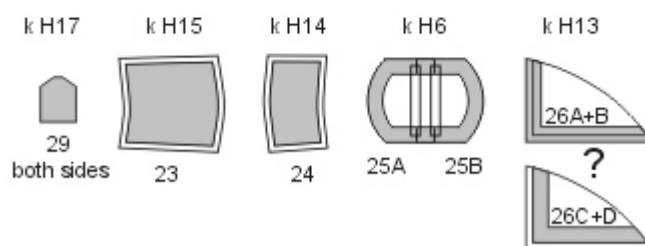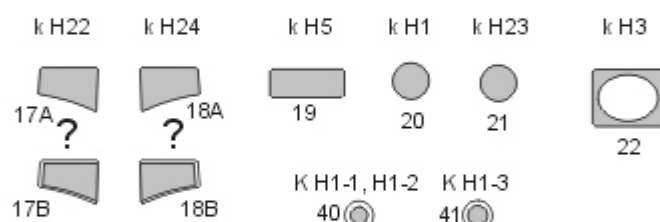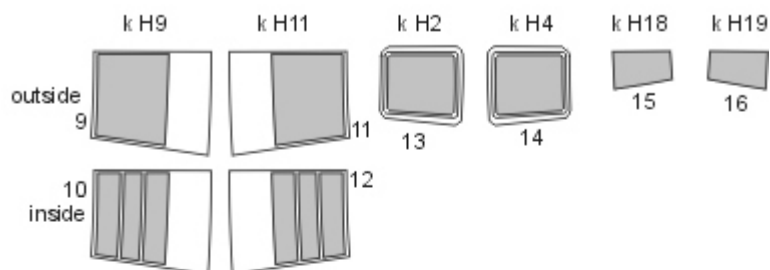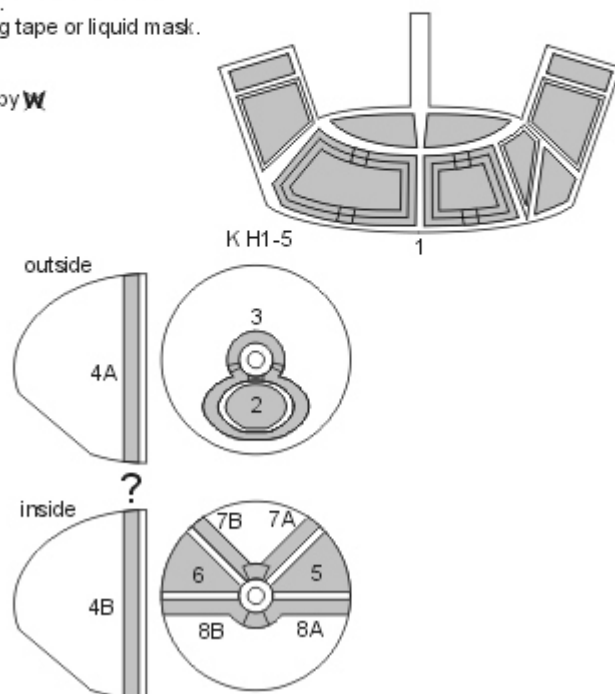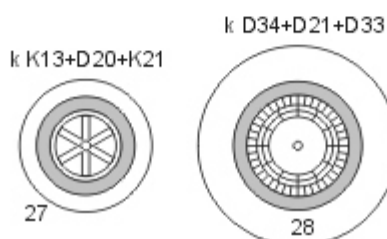



NWAM1291

B-26G Marauder EXPERT kabuki masks for ICM 48323 kit

<http://mek.kosmo.cz/newware>

Includes also windows
inner side masks, camouflage detail
and bombs yellow stripes masks

1/48 scale

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.


K kit part









* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**

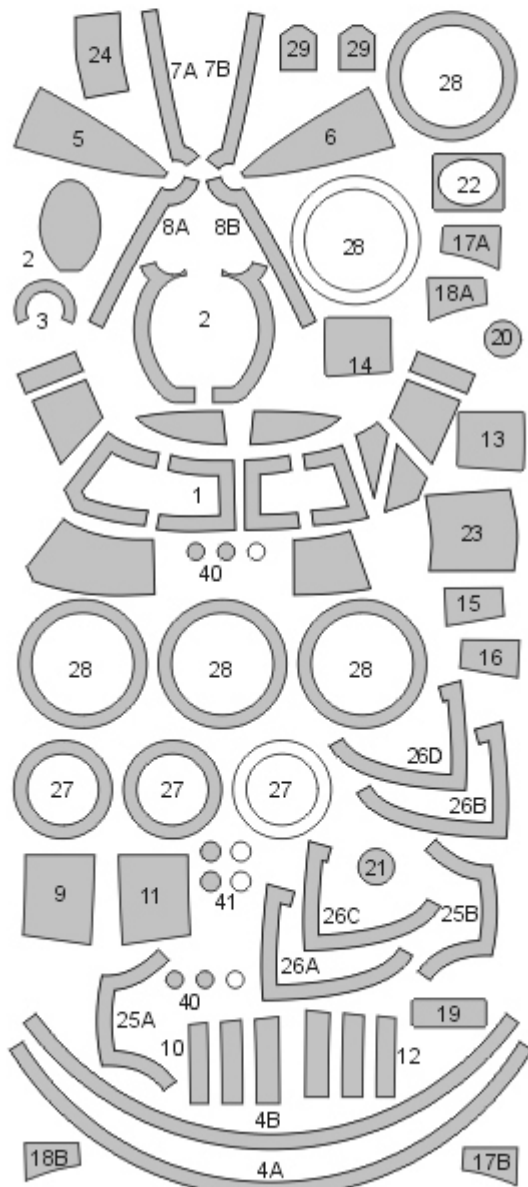

white - spare parts

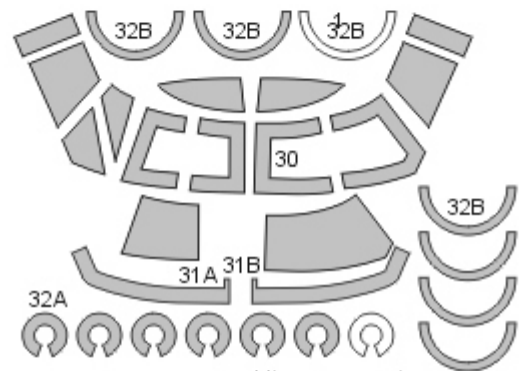

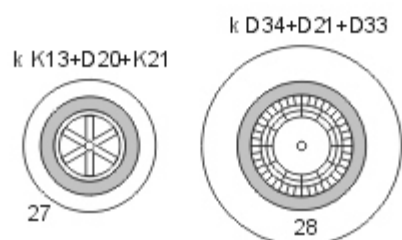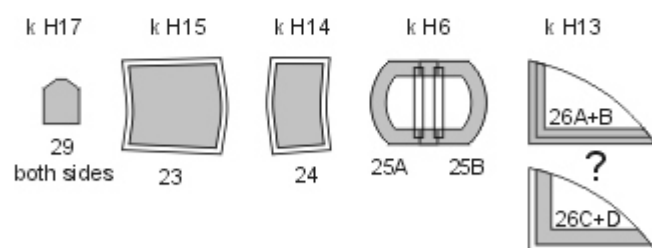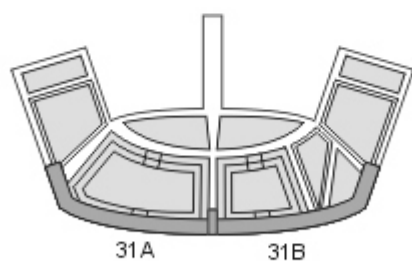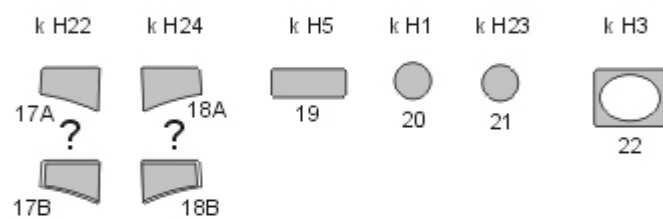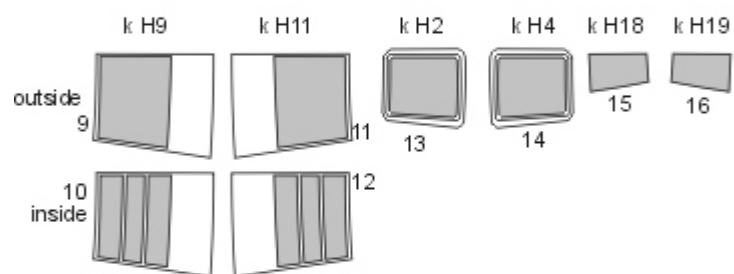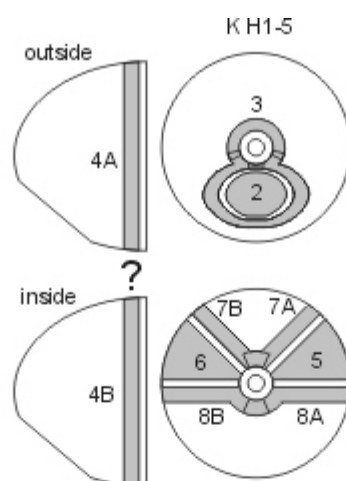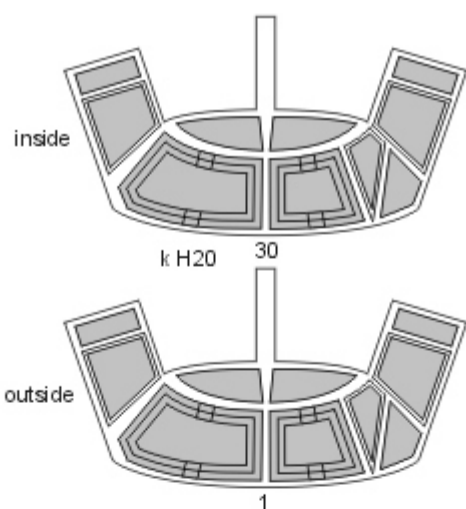



Hurricane Mk.I, Mk.IIC, Mk.IID BASIC kabuki masks

for Hobby Boss 8777, 8778, 8779 and 8880 kits

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:


Let the sprayed color dry before applying masks. Remove masks very carefully after painting.

Where the mask is divided into A and B parts, first apply part A, next part B.


The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part


* start placing the mask from this point

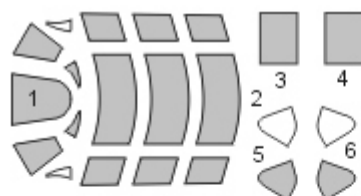Placing wet masks on wet surface is recommended, except those marked by **W**

WHITE - SPARE MASKS

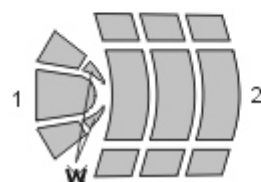

K X 5 K X 6 K X 1 K X 2





Hurricane Mk.I, Mk.IIC, Mk.IID BASIC kabuki masks
for Hobby Boss 8777, 8778, 8779 and 8880 kits
<http://mek.kosmo.cz/newware>

INCLUDES ALSO WINDOWS
INNER SIDE MASKS

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part


* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**

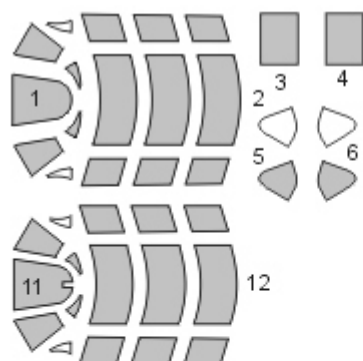


WHITE - SPARE MASKS


K X5 K X6 K X1 K X2



STEP 1 - exterior view
mask interior

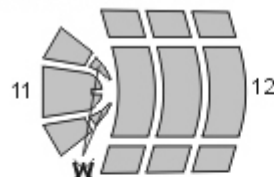

STEP 2
mask exterior

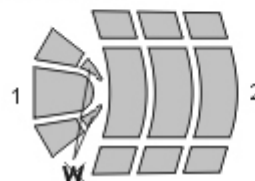



NWAM1294

1/72 scale

Yak-1 kabuki masks
for Zvezda 7327 kit

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.

Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.



K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**



WHITE - SPARE MASKS

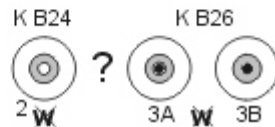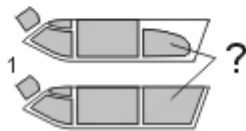



Ju 88 WWII USAAF/RAF bomber BASIC kabuki masks

for ICM48227 kit

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:


Let the sprayed color dry before applying masks. Remove masks very carefully after painting.

Where the mask is divided into A and B parts, first apply part A, next part B.



The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point

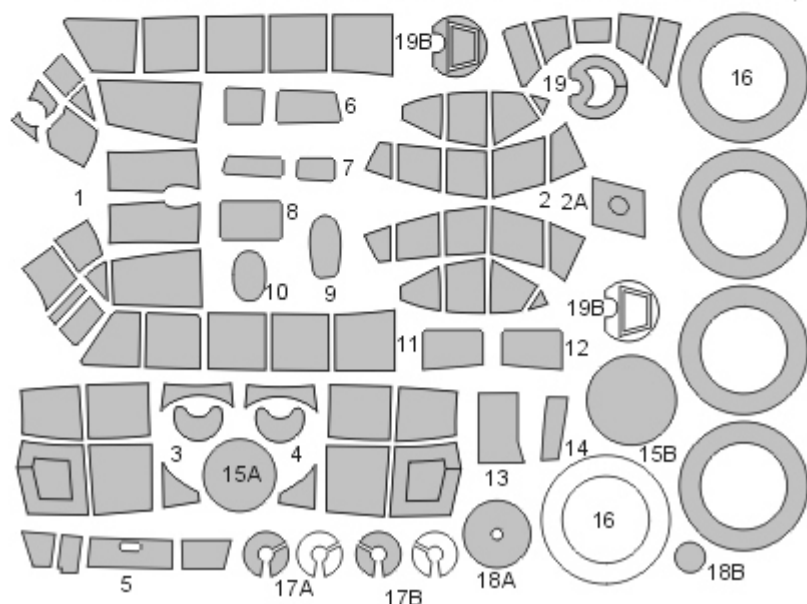Placing wet masks on wet surface is recommended, except those marked by **W**


white - spare parts

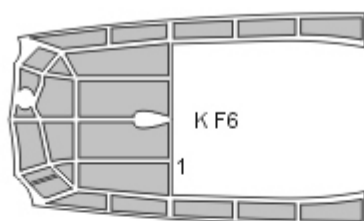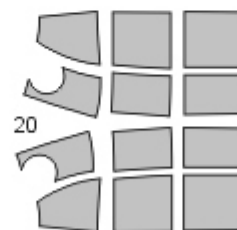

K F20



10

K F18



11

K F19



12

K F2



13

K F3



14

K F1



?



15A

15B

K F17



9

K F4



6

K F5



7

K F15



8

K C1-11



18A+B



K F7



19B

K F8



19

K F13



3

K F14



4

K F12



2

K F9



2A

2

K F10



5

K C5+C22



16

K C4



17A



17B

K F11



20

NWAM1296

1/48 scale



Ju 88 WWII USAAF/RAF bomber EXPERT kabuki masks

for ICM 48227 kit

<http://mek.kosmo.cz/newware>

INCLUDES AIRCRAFT CANOPY
INNER SIDE MASKS

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.



Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part


* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**

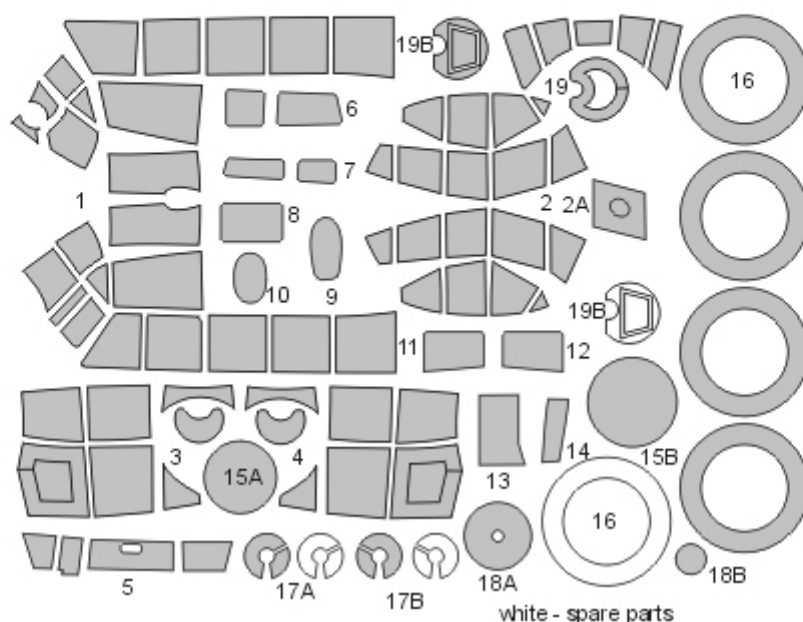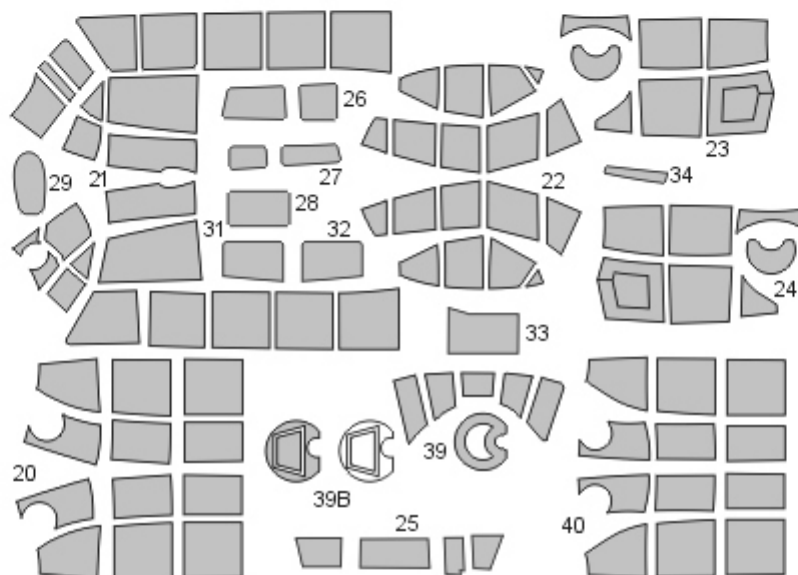


white - spare parts

STEP 1 - exterior view
mask inner side, paint interior color

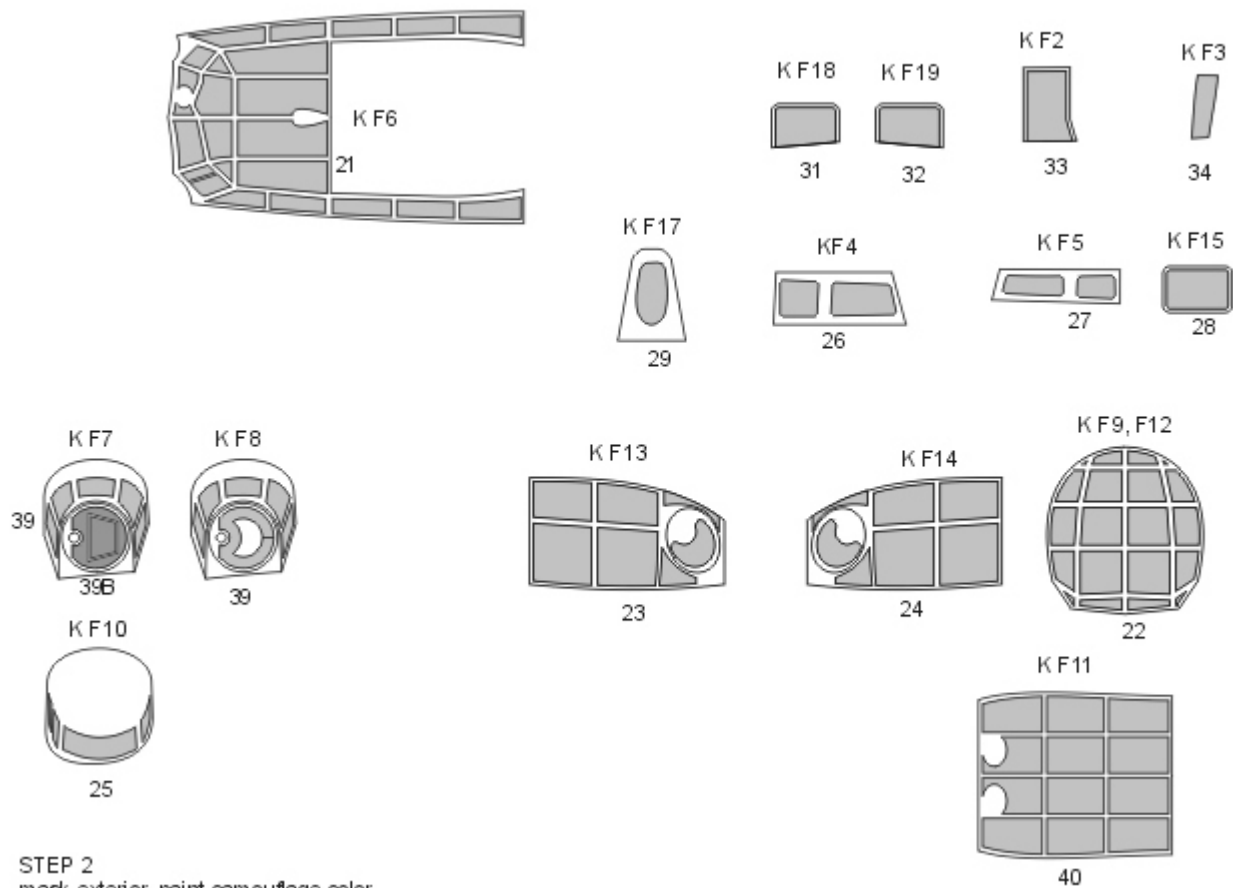

STEP 2
mask exterior, paint camouflage color

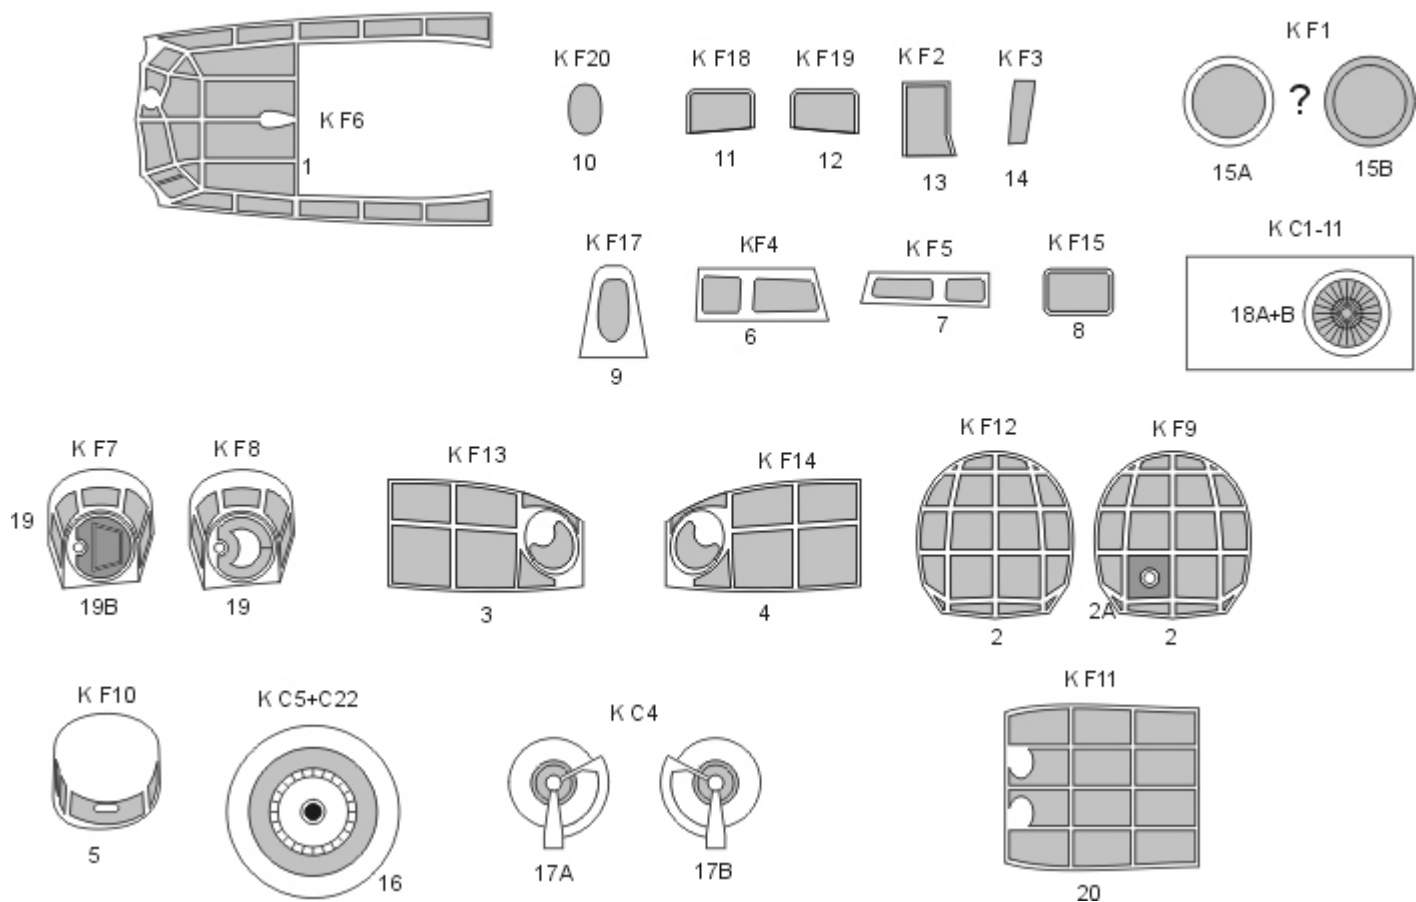



Antonov AN-2/AN-2CX/AN-2M Colt BASIC kabuki masks for Hobby Boss 81705 and 81707 kits

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**


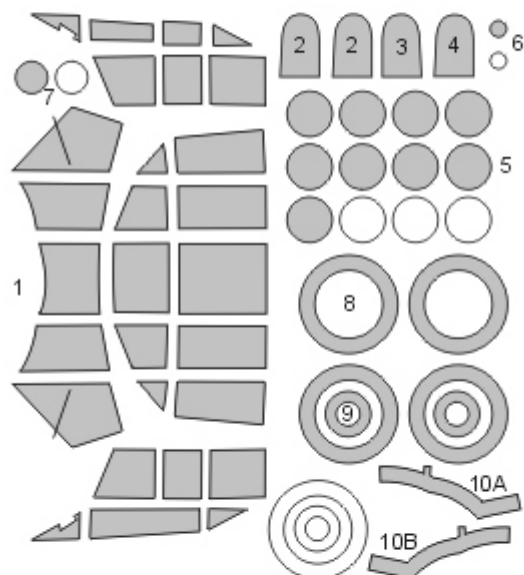


white - spare parts


K F11 K F12 K F13



K K11+K10 K K9+K14

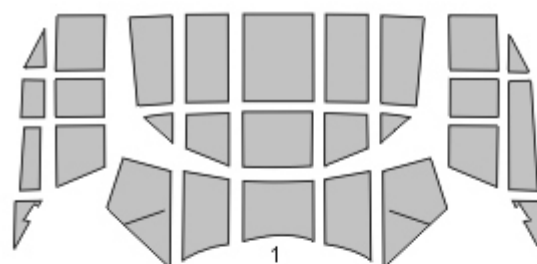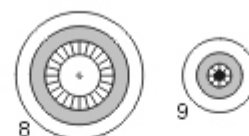

K F4, F5, F7 K F6 K F8

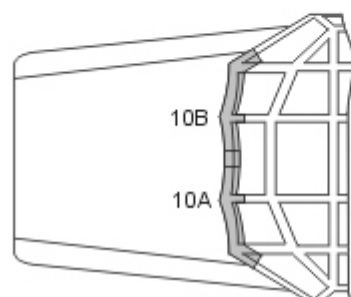



Antonov AN-2/AN-2CX/AN-2M Colt EXPERT kabuki masks
for Hobby Boss 81705 and 81707 kits

<http://mek.kosmo.cz/newware>

INCLUDES WINDOWS
INNER SIDE MASKS

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point


Placing wet masks on wet surface is recommended, except those marked by **W**

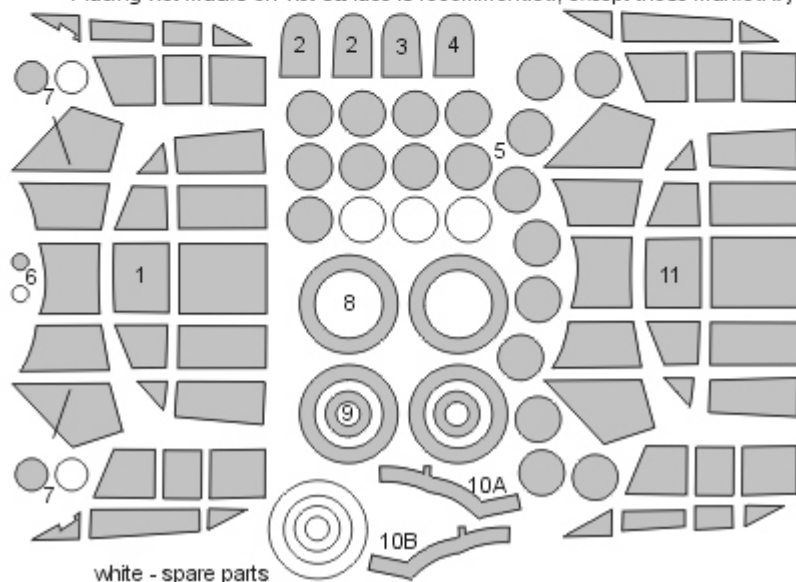


K F11 K F12 K F13



K K11+K10 K K9+K14

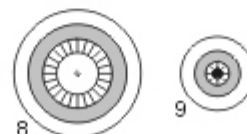

STEP 1 - exterior view
mask inner side, paint interior color

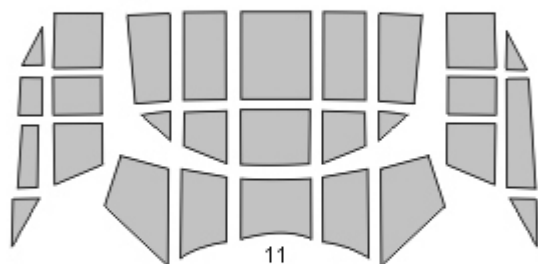

K F4, F5, F7 K F6 K F8



STEP 2
mask exterior, paint camouflage color

