



NEW WARE NEWSLETTER

NEW MASKS SEPTEMBER 2025

NWAM1328 1/72 F-4B Phantom II BASIC kabuki masks	Fine Molds
NWAM1329 1/72 F-4B Phantom II ADVANCED kabuki masks	Fine Molds
NWAM1330 1/72 F-4B Phantom II EXPERT kabuki masks	Fine Molds
NWAM1331 1/48 Mi-24P Hind-F ADVANCED kabuki masks	Trumpeter
NWAM1332 1/48 Mi-24P Hind-F EXPERT kabuki masks2	Trumpeter
NWAM1333 1/48 P-47D Thunderbolt Razorback BASIC kabuki masks	MiniArt
NWAM1334 1/48 P-47D Thunderbolt Razorback EXPERT kabuki masks	MiniArt
NWAM1335 1/48 Do 217M-1 BASIC kabuki masks	ICM
NWAM1336 1/48 Do 217M-1 EXPERT kabuki masks	ICM




F-4B Phantom II BASIC kabuki masks
for Fine Molds FF05 and other F-4B kits
<http://mek.kosmo.cz/newware>


tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.
Where the mask is divided into A and B parts, first apply part A, next part B.
The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.
K kit part
^ start placing the mask from this point
Placing wet masks on wet surface is recommended, except those marked by **W**

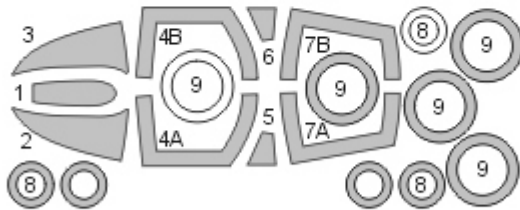

WHITE - SPARE MASKS

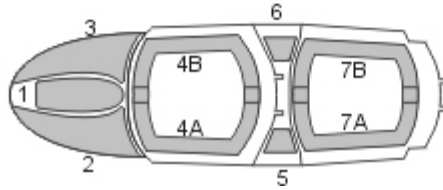

K A17



K AA13+AA14





F-4B Phantom II **ADVANCED** kabuki masks
for Fine Molds FF05 and other F-4B kits
<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz


Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.
Where the mask is divided into A and B parts, first apply part A, next part B.
The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point


Placing wet masks on wet surface is recommended, except those marked by **W**

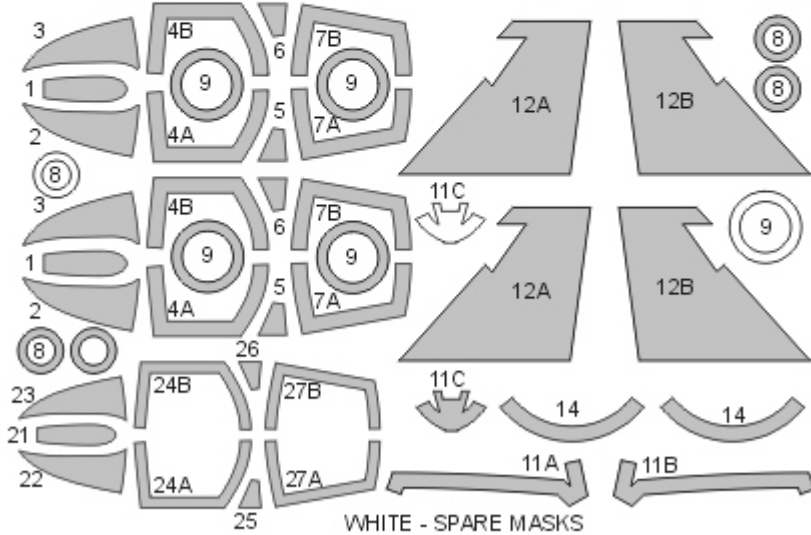


K A17 K AA13+AA14





STEP 1
paint interior color

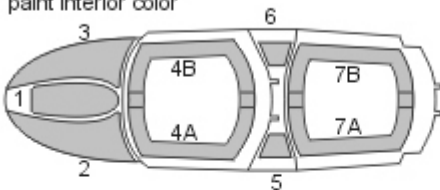

STEP 2
paint seal color

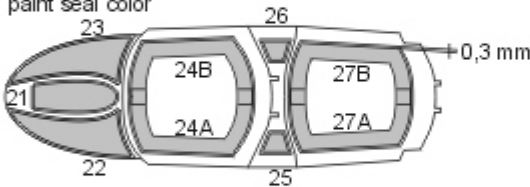


STEP 3
paint camouflage color

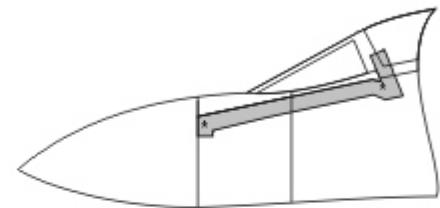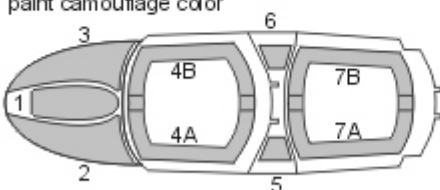


11A
opposite side 11B

K L3-1, L3-2

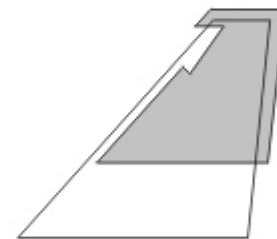

12A
opposite side 12B

K D17+D18





F-4B Phantom II EXPERT kabuki masks
for Fine Molds FF05 and other F-4B kits
<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz


Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.
Where the mask is divided into A and B parts, first apply part A, next part B.
The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part


* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**

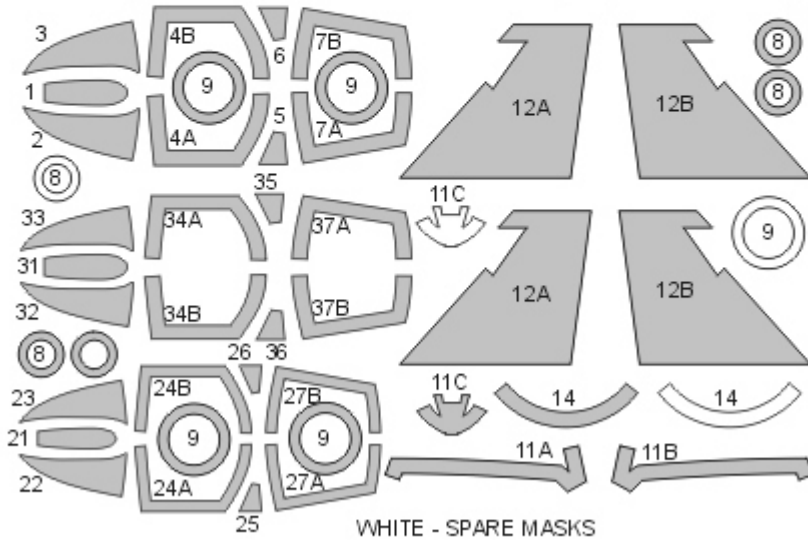


WHITE - SPARE MASKS



STEP 1 - exterior view
mask interior, paint interior color

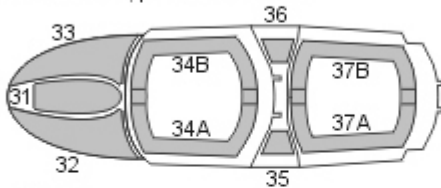


STEP 2
paint seal color

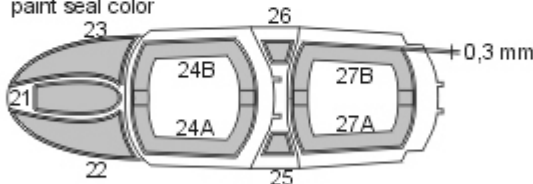

STEP 3
paint camouflage color

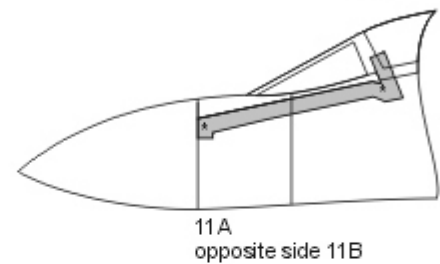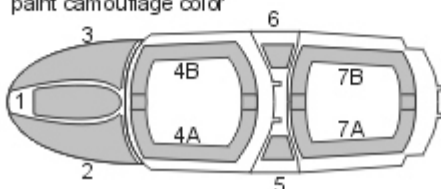


K L3-1, L3-2

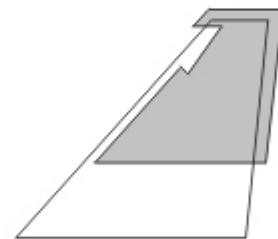

12A
opposite side 12B

K D17+D18





Mi-24P Hind-F ADVANCED kabuki masks

for Trumpeter 05829 kit

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz

Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.


Where the mask is divided into A and B parts, first apply part A, next part B.

The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point



Placing wet masks on wet surface is recommended, except those marked by **W**

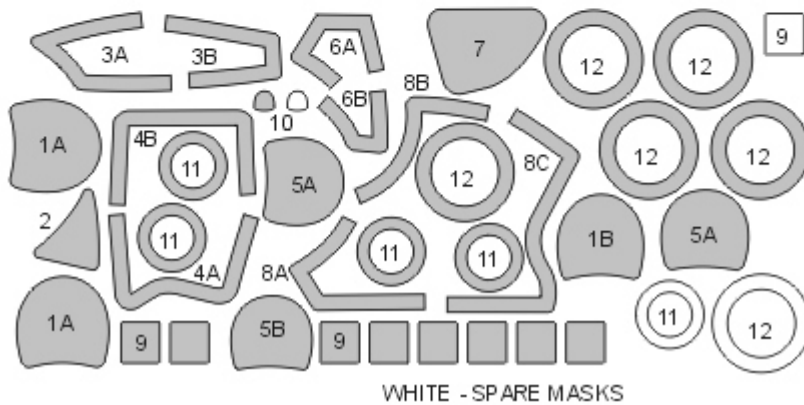

K P1, P2, P3, P4 K N2



K A38+A32 K A19+A25

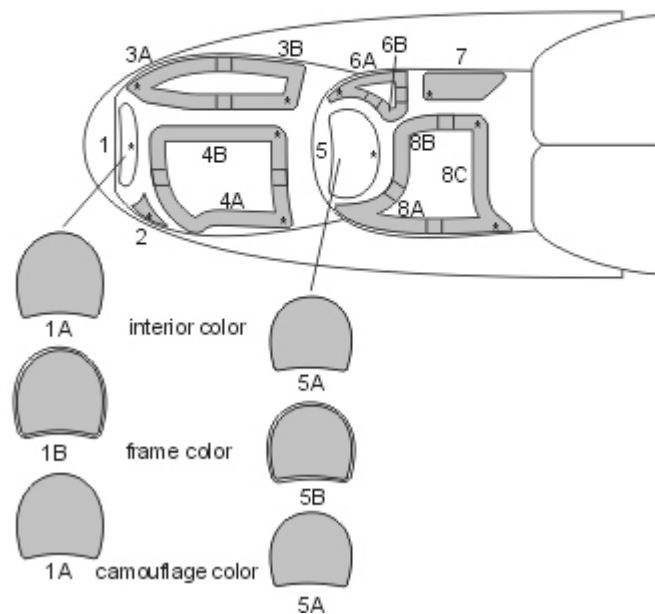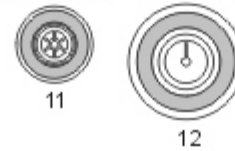



Mi-24P Hind-F EXPERT kabuki masks
for Trumpeter 05829 kit
<http://mek.kosmo.cz/newware>

Includes also windows
inner side masks

tom.nwkits@seznam.cz



Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.
Where the mask is divided into A and B parts, first apply part A, next part B.
The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.


K kit part

* start placing the mask from this point


Placing wet masks on wet surface is recommended, except those marked by **W**

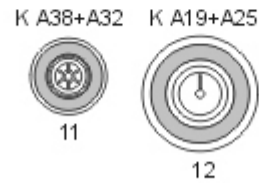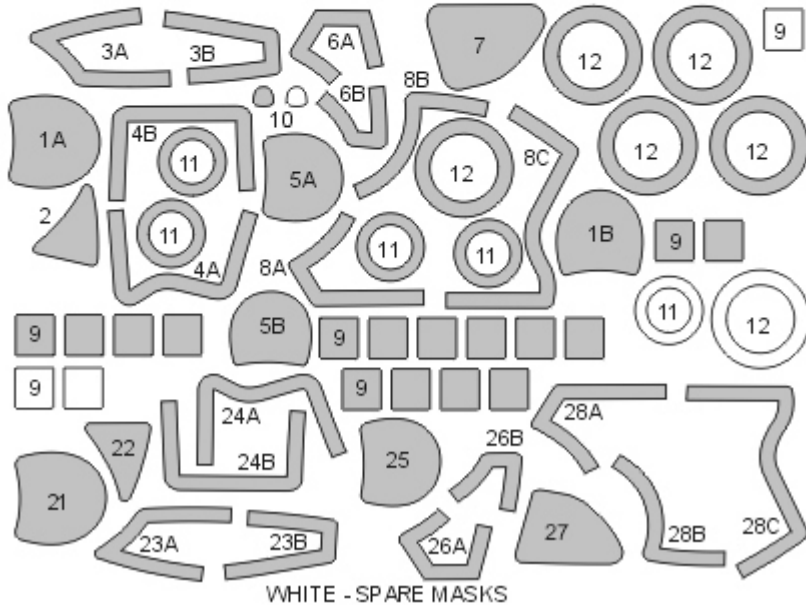

STEP 1 - exterior view
mask interior, paint interior color

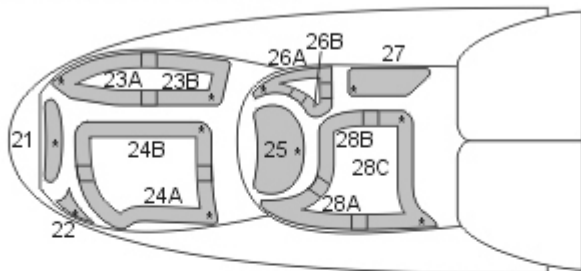

STEP 2
mask exterior, paint camouflage color

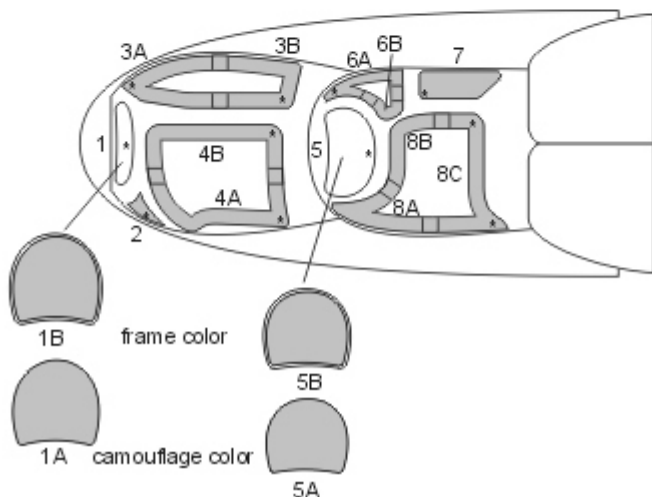



P-47D Thunderbolt Razorback BASIC kabuki masks
 for MiniArt 48034, 48037, 48030 and derivated kits
<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz



Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.
 Where the mask is divided into A and B parts, first apply part A, next part B.
 The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part

* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**

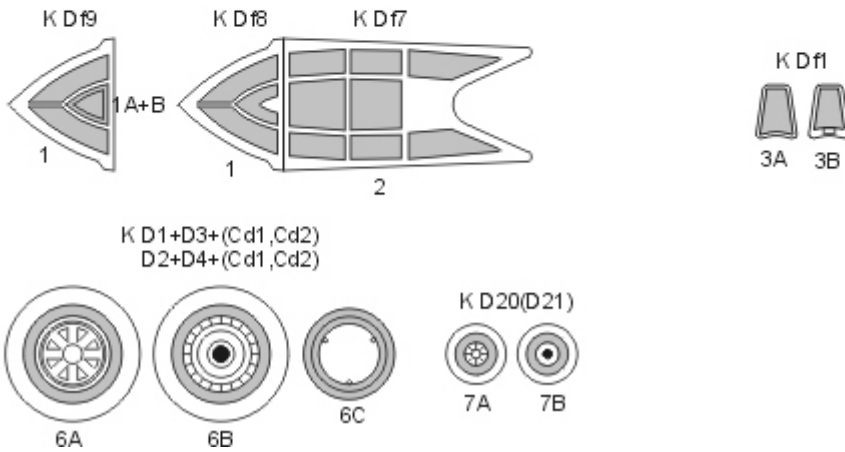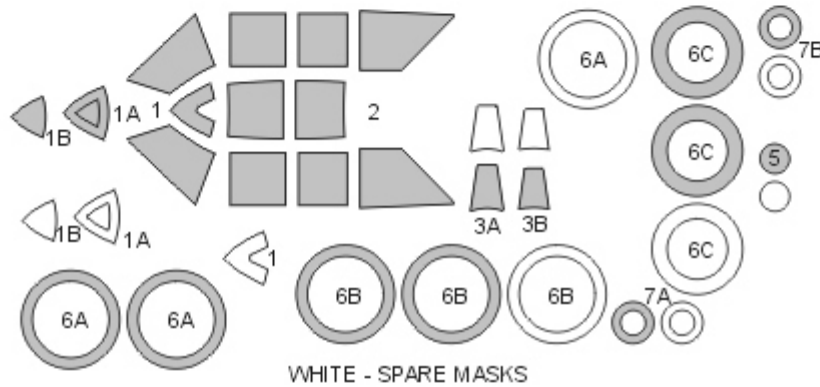

NWAM1334

1/48 scale



P-47D Thunderbolt Razorback EXPERT kabuki masks
for MiniArt 48034, 48037, 48030 and derived kits
<http://mek.kosmo.cz/newware>

Includes also windows
inner side and yellow
stripes on bombs masks

tom.nwkits@seznam.cz


Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.
Where the mask is divided into A and B parts, first apply part A, next part B.
The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part


* start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**

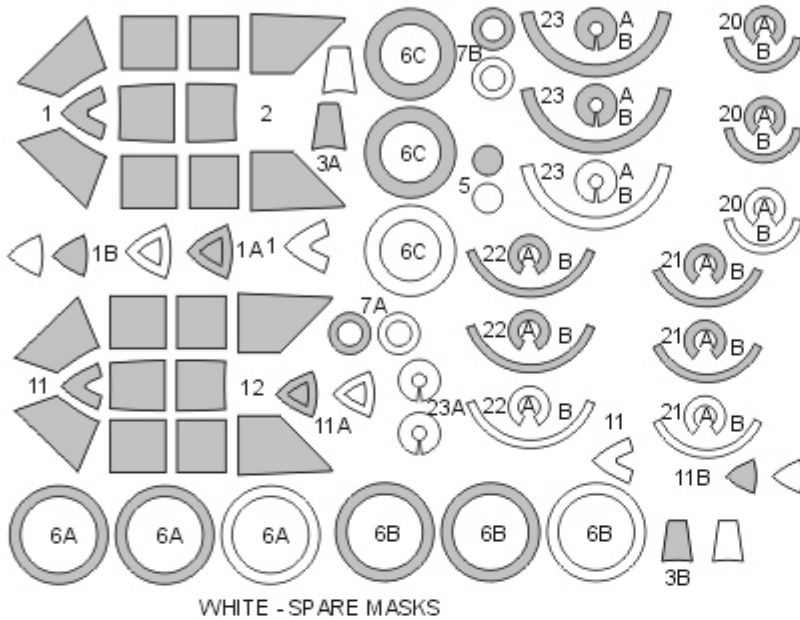




STEP 1

mask interior, paint interior color

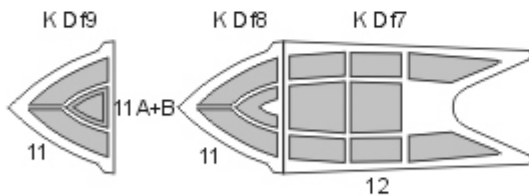

STEP 2

mask exterior, paint camouflage color

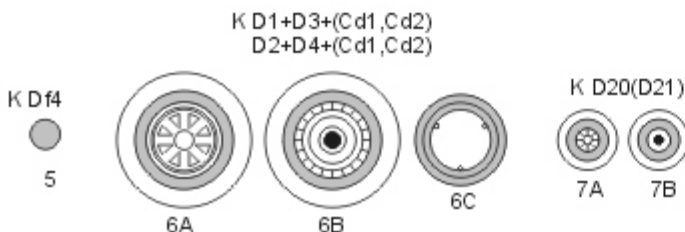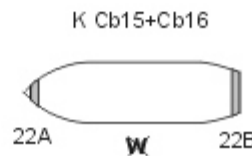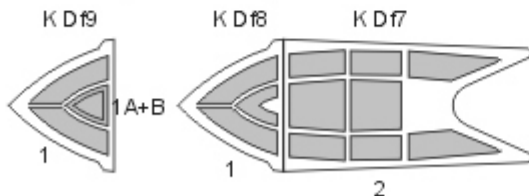

NWAM1335

1/48 scale



Do 217M-1BASIC kabuki masks

for ICM 48274 kit

<http://mek.kosmo.cz/newware>

tom.nwkits@seznam.cz





Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.
Where the mask is divided into A and B parts, first apply part A, next part B.
The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.



K kit part

^ start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**

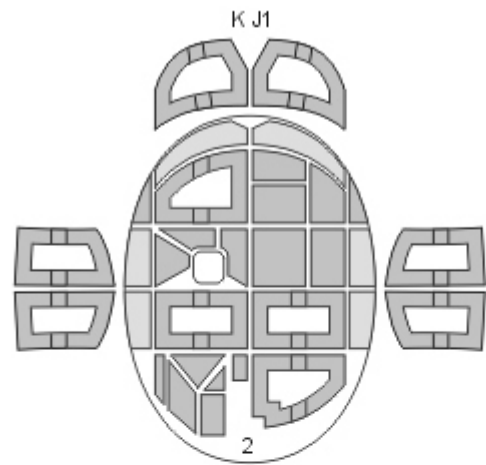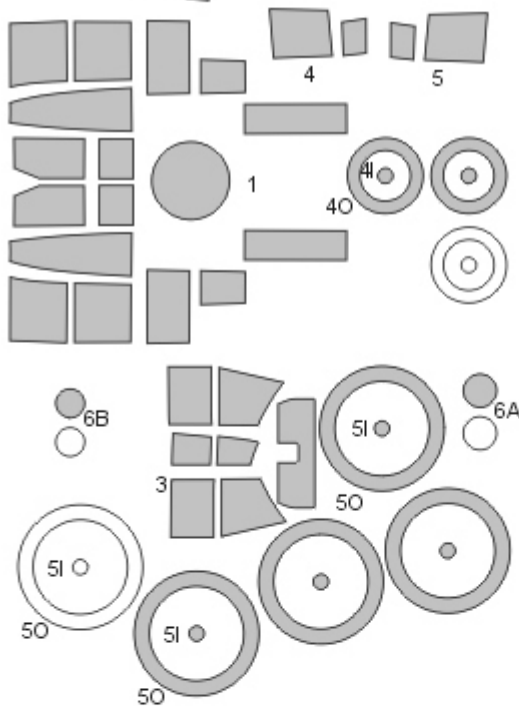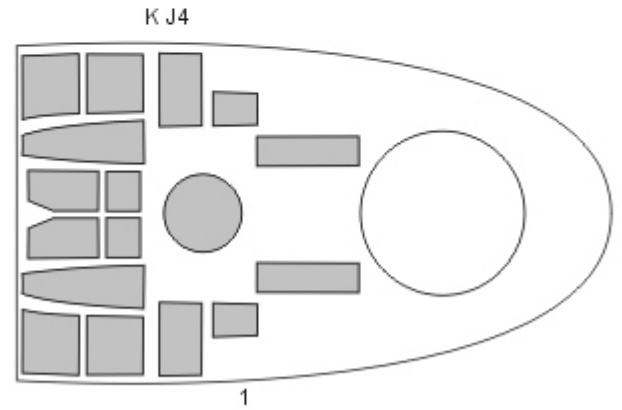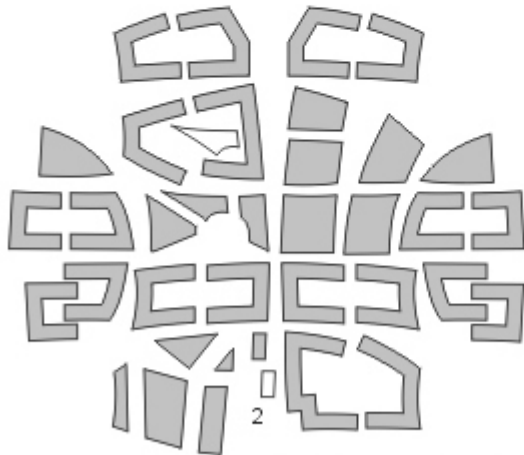

WHITE - SPARE MASKS

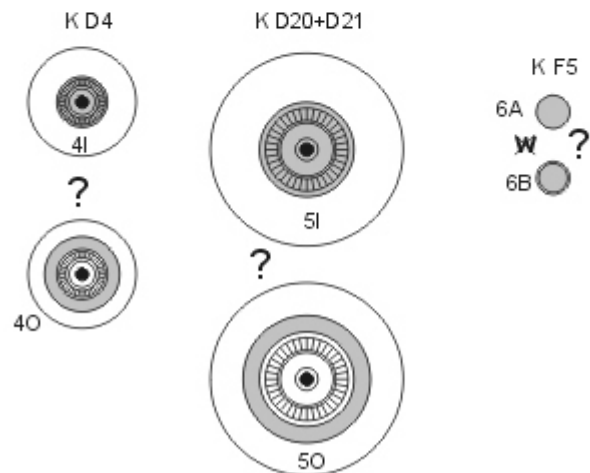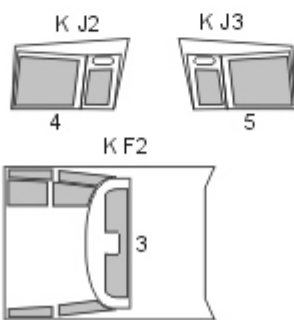



Do 217M-1 EXPERT kabuki masks

for ICM 48274 kit

<http://mek.kosmo.cz/newware>

Includes also windows
inner side masks

tom.nwkits@seznam.cz


Important:

Let the sprayed color dry before applying masks. Remove masks very carefully after painting.
Where the mask is divided into A and B parts, first apply part A, next part B.
The set does not include masks for all areas, so mask the rest with masking tape or liquid mask.

K kit part


^ start placing the mask from this point

Placing wet masks on wet surface is recommended, except those marked by **W**

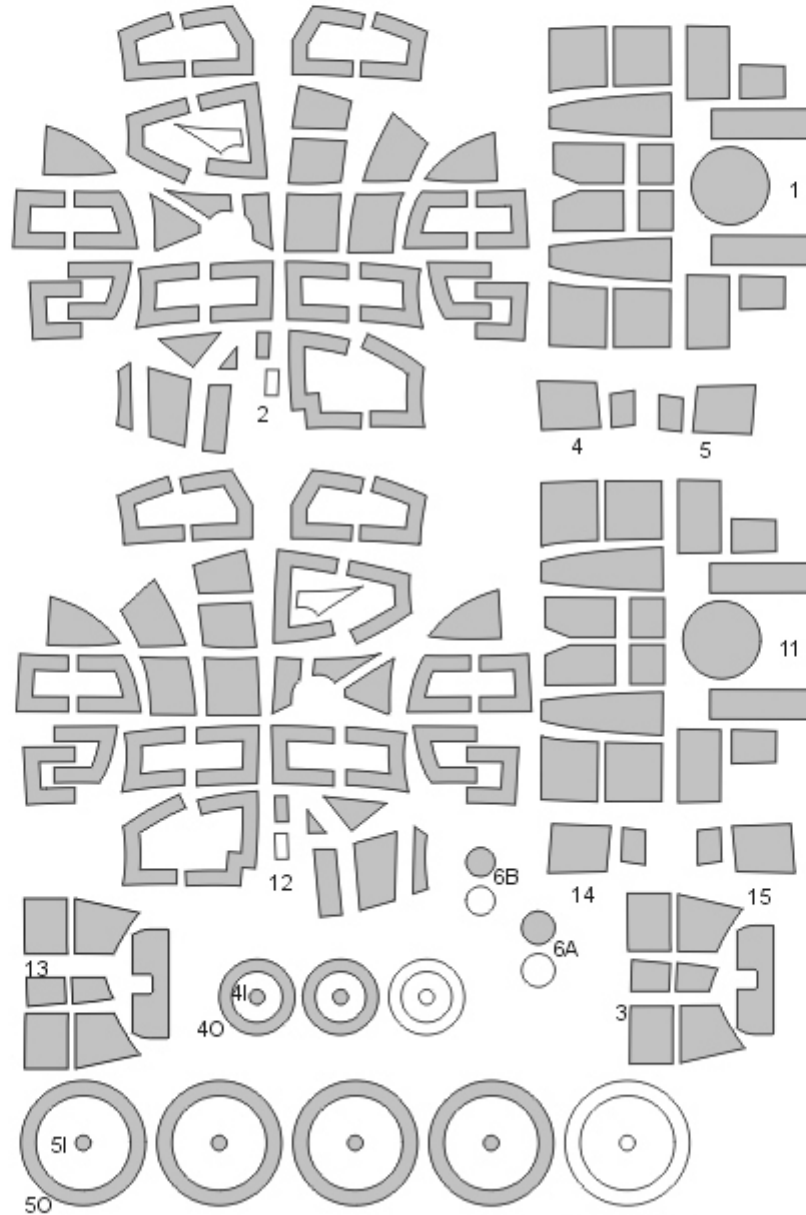

WHITE - SPARE MASKS

STEP 1 - exterior view
mask interior, paint interior color

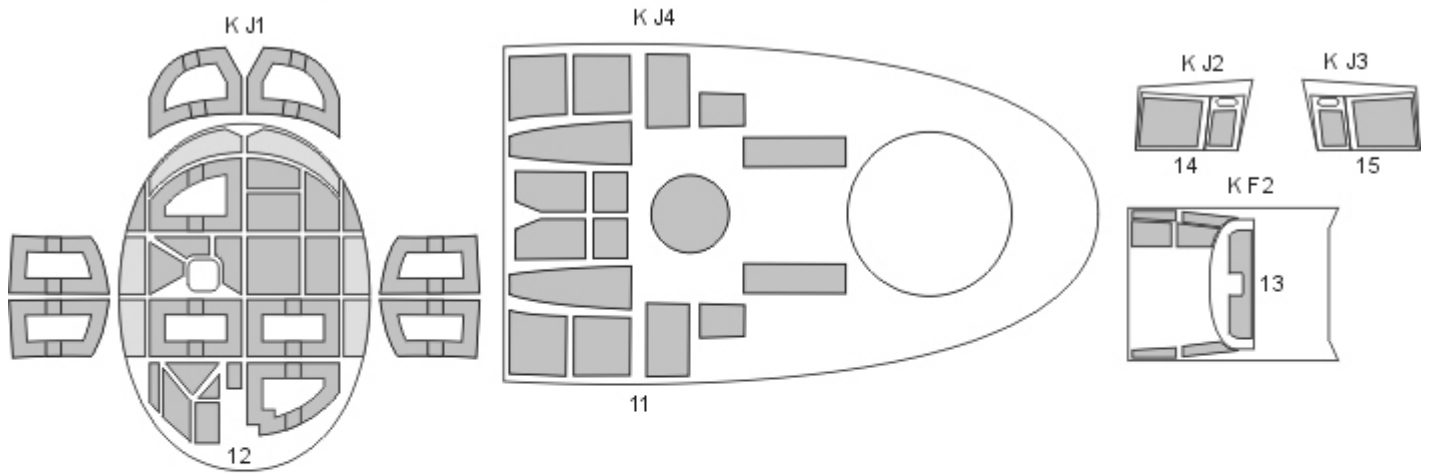

STEP 2
mask exterior, paint camouflage color

